
Parts Manual for

# SNAPPER

GEAR & HYDRO DRIVE MODELS: LT120G30BB, LT125G33BB, ELT125G33BB LT140H33BBV, ELT140H33BBV

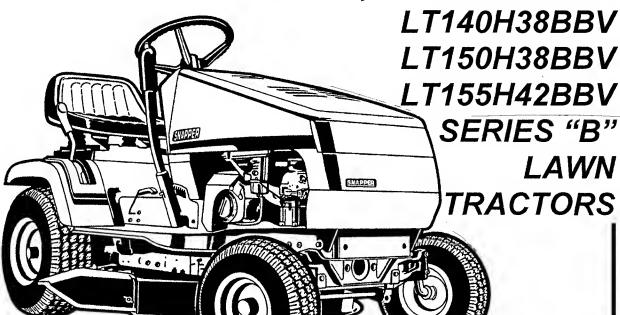

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER McDonough, GA., 30253 U.S.A.

## **CONTENTS**


PAGE	GROUP
4, 5	HOOD, BUMPER, HEADLIGHTS & COMPONENTS
6, 7	STEERING WHEEL, CONSOLE, FUEL TANK
8, 9	SEAT, REAR FENDER & COMPONENTS
10, 11	FRONT AXLE & FRONT WHEEL PARTS
12, 13	TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS
14, 15	TRANSMISSION GROUP (Gear Drive) & REAR WHEELS
16, 17	FRAME, CLUTCH, BRAKE & STEERING COMPONENTS
18, 19	BLADE ENGAGEMENT & TRANSMISSION CONTROLS
20, 21	30" CUTTING DECK, BELTS, BRAKES
22	SPINDLE - 30" CUTTING DECK
23:	ELECTRICAL COMPONENTS
24, 25	33" CUTTING DECK, BELTS, BRAKES
26, 27	38" CUTTING DECK, BELTS, BRAKES
28	SPINDLE - 38" CUTTING DECK
29	IMPLEMENT LIFT PARTS
30, 31	42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)
32	BELT, BLADE BRAKE - 42" CUTTING DECK
33	SPINDLE ASSEMBLY - 42" CUTTING DECK
34, 35	ENGINE COMPONENTS
36	ELECTRICAL - Brigg's & Stratton Engines (14, 15, & 15.5 HP)
37	ELECTRICAL - Brigg's & Stratton Engines (12 & 12.5 HP)

## ALWAYS USE "GENUINE" SNAPPER PARTS...

To Our Dealer's:


As a professional, you take pride in your business. You have the skill and the expertise to perform the latest technology in the repair of high quality lawn cutting equipment. You recognize the importance of keeping abreast of the ever-changing advancements in lawn cutting technology. A SNAPPER Lawn Tractor proves its worth over years of big, tough jobs. SNAPPER builds the same superb quality in all of their products, from mowers to tillers. SNAPPER has a long-term commitment to providing customer satisfaction by building equipment that reflects the highest standards of manufacturing excellence and by offering quality service and parts to keep them operating at peak performance. Gaining customer loyalty and repeat business is accomplished by your dedication to providing "Superior Service".

NO ONE DESERVES ANYTHING LESS THAN THE EFFICIENCY AND DURABILITY OF A <u>SNAPPER</u>...

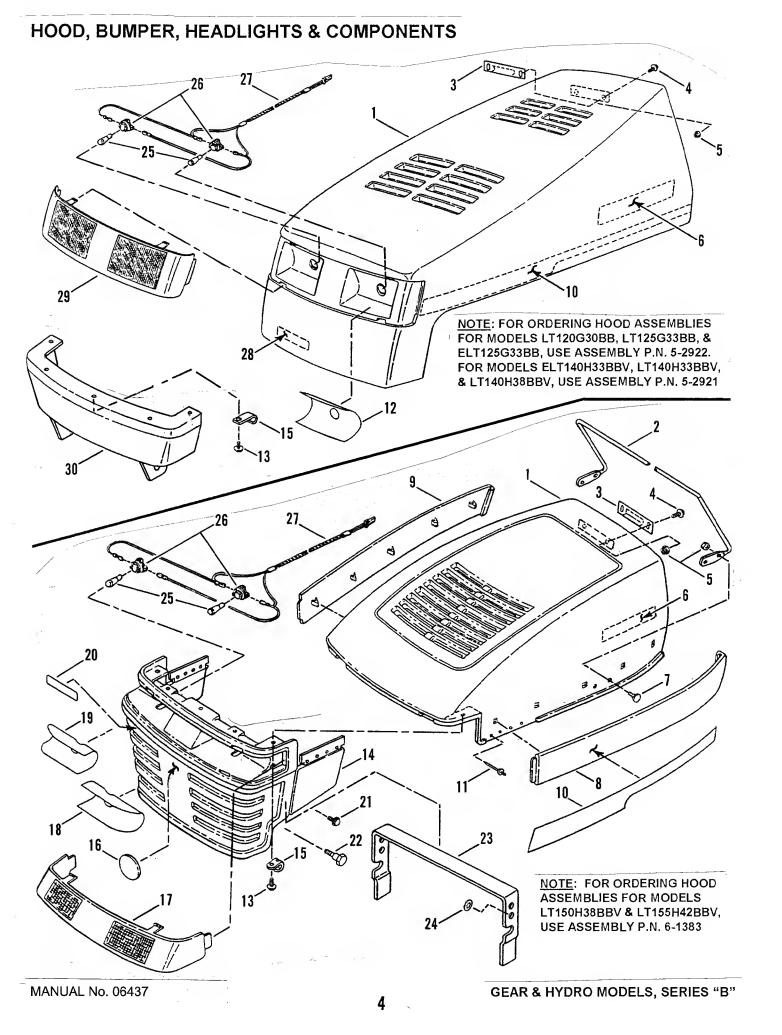

## **HOOD, BUMPER, HEADLIGHTS & COMPONENTS**


ITEM	PART NO.	DESCRIPTION
1	2-4605	HOOD, (30", 33", & ELT33" Gear Drive Models) (ELT 33" & 38" Hydro Drive Models) (1995)
	2-4471	(30", 33", & ELT33" Gear Drive Models) (38" Hydro Drive Models) (1996) HOOD, Mozart (LT150H38BBV & LT155H42BBV Hydro Drive Models) (Model Year 1995) (LT150H38BBV, LT155H42BBV & ELT140H33BBV Hydro Drive Models) (Model Year 1996)
2	1-6766	ROD, Hood Support
3	2-4718	LATCH, Spring
4	9-0999	SCREW, 1/4-20 x 5/8" Truss Head, Torx (2)
5	7-6978	NUT, 1/4-20 Hex Nyloc (6)
6A	2-4903	DECAL - SNAPPER, 8" Molded Logo, White Letters (Gear Dr. Mdls. LT120G30BB, LT125G33BB, & ELT125G33BB)
	1-6974	DECAL - SNAPPER, 8" Molded Logo, Silver Letters (Hydro Dr. Mdls. ELT140H33BBV, LT140H33BBV, LT150H38BBV, & LT155H42BBV)
6B	2-6228	LOGO - BLACKHAWK (Models BH140H33BBV & BH140H38BBV) (2)
7	9-0803	BOLT, 1/4-20 x 5/8" Flat Head Carriage (4)
8	2-9572	PANEL, Hood (Left Hand) (Black)
9	2-9571	PANEL, Hood (Right Hand) (Black)
10A	2-7840	DECAL, Hood (Right Hand) (Model ELT140H33BBV & LT140H33BBV) (Hydro Drive)
	2-7841	DECAL, Hood (Left Hand) (Model ELT140H33BBV & LT140H33BBV) (Hydro Drive)
	2-7832	DECAL, Hood (Right Hand) (Model LT140H38BBV) (Hydro Drive)
	2-7833	DECAL, Hood (Left Hand) (Model LT140H38BBV) (Hydro Drive)
	2-9585	DECAL, Hood (Right Hand) (Model LT150H38BBV) (Hydro Drive)
	2-9586	DECAL, Hood (Left Hand) (Model LT150H38BBV) (Hydro Drive)
	2-9587	DECAL, Hood (Right Hand) (Model LT155H42BBV) (Hydro Drive)
	2-9588	DECAL, Hood (Left Hand) (Model LT155H42BBV) (Hydro Drive)
	2-7824	DECAL, Hood (Right Hand) (Model LT120G30BB) (Gear Drive)
	2-7825	DECAL, Hood (Left Hand) (Model LT120G30BB) (Gear Drive)
	2-7826	DECAL, Hood (Right Hand) (Models LT125G33BB & ELT125G33BB) (Gear Drive)
	2-7827	DECAL, Hood (Left Hand) (Models LT125G33BB & ELT125G33BB) (Gear Drive)
10B	2-6706	DECAL, Hood (Right Side) (Models BH140H33BBV & BH140H38BBV)
	2-6707	DECAL, Hood (Left Side Shown) (Models BH140H33BBV & BH140H38BBV)
11	9-1095	RIVET, 1/8" Pop (8)
12	1-7175	DECAL, Clear Lens (Left Hand)
	1-7174	DECAL, Clear Lens (Right Hand)
13	9-1106	SCREW, M4.8 x 1.59 x 16.00MM, Special (5)
14	2-9570	GRILLE, Hood
15	2-6482	CLIP, "J"
16	7-1544	DECAL, Molded Medallion (Hydro Models Only!)
17	2-9602	LENS, Grille (Headlights)
18	2-6180	DECAL, Reflect (Left Hand)
19	2-6179	DECAL, Reflect (Right Hand)
20	2-2968	DECAL - SNAPPER, 4" Molded Logo (Silver Letters - Blue Stripe) (Hydro Mdls. Only!)
21 22	9-0858 2-4061	SCREW, 5/16-18 x 1/2" Self-Tapping (4)
23	3-4324	BOLT, Shoulder, 3/8-16 x 1 1/4" Hex Socket, Torx (2) BRACE, Hood Support
24	1-1791	RETAINER, Bolt
25	2-6172	·
26	2-4709	BULB, Headlights (2)
27	2-4709 2-6171	SOCKET, Headlight Bulb (2) HARNESS, Headlight Wiring
28	2-4904	DECAL - SNAPPER, 4" Molded Logo (White Letters & Stripe) (Gear Drive Mdls. Only!)
29	2-4904 2-4892	LENS, Solid Black (Models without Headlights)
	2-4893	LENS, Clear (Models with Headlights)
30	2-9620	BUMPER, Front Hood Support

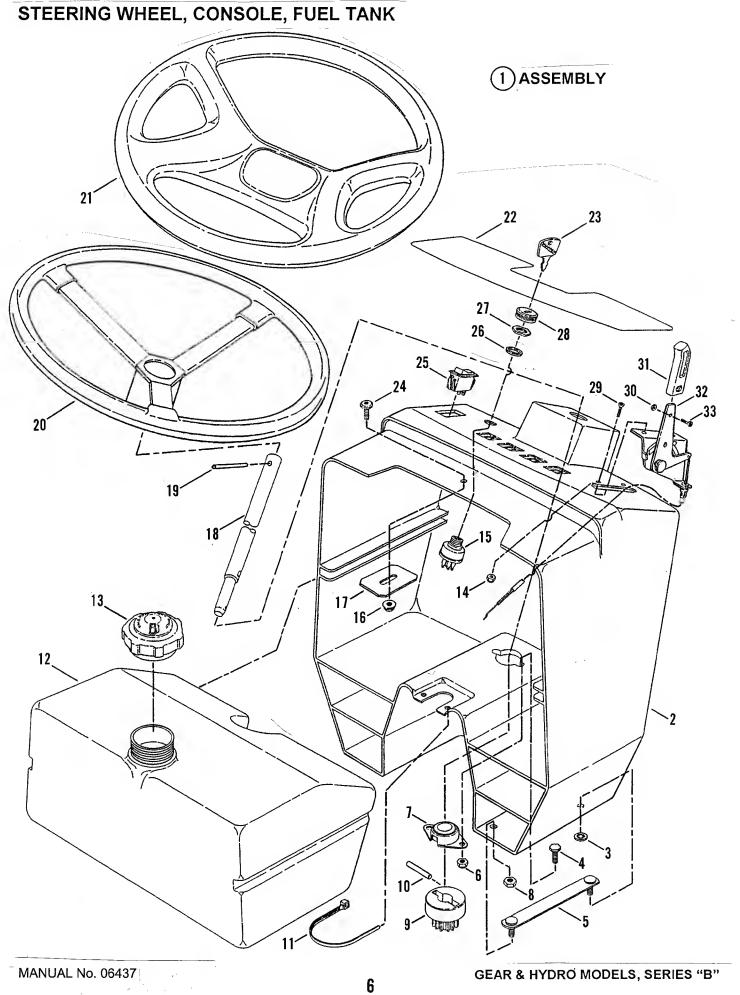

## STEERING WHEEL, CONSOLE, FUEL TANK

ITEM	PART NO.	DESCRIPTION
1	5-2825	ASSEMBLY, Console (Includes items 2 thru 7)
2	2-4376	CONSOLE
3	1-1791	RETAINER (4)
4	9-1495	SCREW, 1/4-20 x 3/4" Hex Head Cap, Grade 5 (2)
5	5-2891	ASSEMBLY, Strap-Clinch Stud (2)
6	7-6978	NUT, 1/4-20 Hex Nyloc (2)
7	2-6196	ASSEMBLY, Flange Bearing
8	9-1575	NUT, 5/16-18 Hex Center Lock (4)
9	2-2368	GEAR, Pinion, Steering Shaft
10	2-2369	PIN, Dowel, 1/4 x 1 1/4"
11	2-4641	TIE, Wire
12	5-2907	ASSEMBLY, Fuel Tank (Includes item 13)
13	1-4363	CAP, Fuel Tank
14	9-1599	NUT, #10-24 Hex Nyloc (2)
15	1-8562	KEYSWITCH (Includes item 27) (Gear Drive Models)
	2-6343	KEYSWITCH (Includes item 27) (Hydro Drive Models)
16	9-0951	NUT, 5/16-18 Hex Flange Lock
17	3-3883	BRACKET, Hood Latch Catch
18	2-2380	SHAFT, Steering
19	1-2765	ROLL-PIN
20	2-7865	STEERING WHEEL (Models LT120G30BB, LT125G33BB, &
		ELT125G33BB) (Gear Drive) (Model Year 1995)
	2-8622	STEERING WHEEL (Models LT120G30BB, LT125G33BB, &
		ELT125G33BB) (Gear Drive) (Model Year 1996)
21	2-9595	STEERING WHEEL (Models ELT140H33BBV, LT140H33BBV,
		LT140H38BBV, LT150H38BBV, & LT155H42BBV) (Hydro Drive)
	2-2388	STEERING WHEEL (Not Shown) (Models BH140H33BBV &
		BH140H38BBV) (Hydro Drive)
22	2-4627	DECAL, Console (Models LT120G30BB, LT125G33BB, &
		ELT125G33BB) (Gear Drive)
	2-7835	DECAL, Console (ELT140H33BBV, LT140H33BBV, LT140H38BBV,
		LT150H38BBV, & LT155H42BBV) (Hydro Drive - With Lights)
	2-6709	DECAL, Console (Models BH140H33BBV & BH140H38BBV)
23	2-3504	KEY, Special (With Cover)
24	9-1001	SCREW, 5/16-18 x 5/8" Truss Head, Torx
25	2-3187	SWITCH, Lights (Hydro Drive Models Only!)
26	2-9714	SPACER
27	2-9721	NUT, 5/8-32 Hex
28	2-3506	BEZEL
29	9-1188	SCREW, #10-24 x 5/8" Machine (2)
30	9-1018	NUT, #8-32 Hex
31	2-3655	HANDLE, Throttle Control
32	2-4642	CONTROL, Throttle
33	9-1017	SCREW, #8-32 x 3/8" Cross-Recessed, Fillester Head


## **SEAT, REAR FENDER & COMPONENTS**

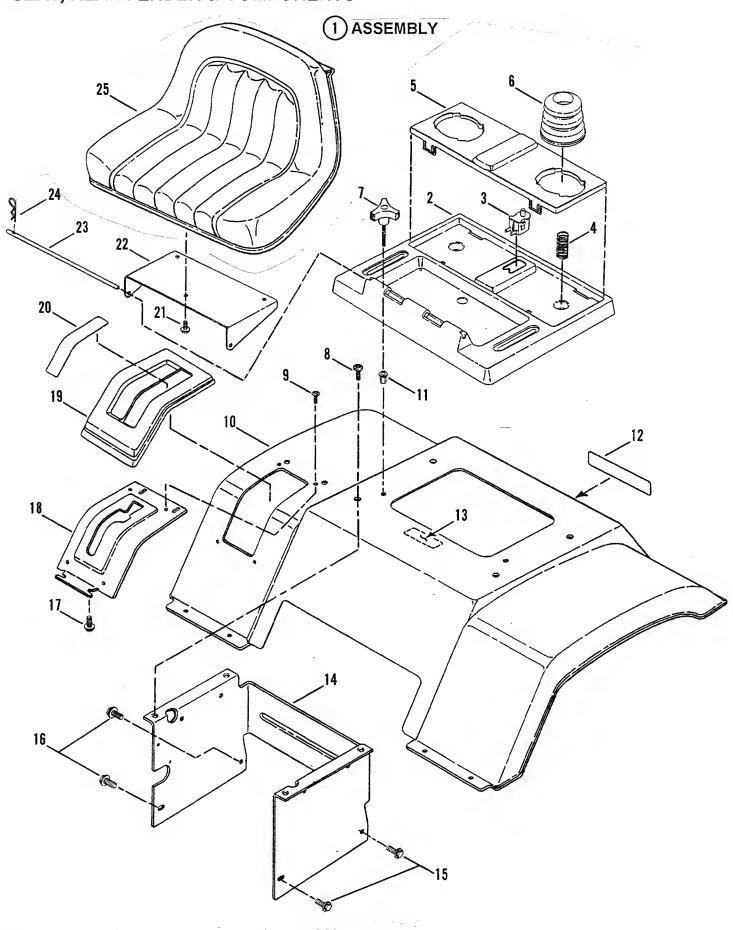


#### **SEAT, REAR FENDER & COMPONENTS**

ITEM	PART NO.	DESCRIPTION
1	5-2606	ASSEMBLY, Seat Support (Includes items 2, 3, 5, & 2 item 4)
2	1-7852	SUPPORT, Seat
3	2-3354	SWITCH, Seat
4	2-2759	SPRING (2)
5	1-7851	HOLDER, Cushion
6	1-9109	CUSHION, Seat (2)
7	1-7875	KNOB, Seat Adjustment (2)
8	9-1001	SCREW, 5/16-18 x 5/8" Truss Head, Torx (4)
9	9-0362	SCREW, 1/4-20 x 5/8" Hex Washer Head, Self-Tapping (4)
10	3-3314	PAN, Seat (Fender)
11	9-1761	RIV-NUT, 5/16-18 Round (2)
12	2-4905	DECAL - SNAPPER, 7.28" Molded Logo, White Letters & Stripe (Gear
		Drive Models)
	2-2971	DECAL - SNAPPER, 7.28" Molded Logo, Silver Letters & Blue Stripe
		(Hydro Drive Models)
	2-6228	DECAL - BLACKHAWK, Molded Logo (Models BH140H33BBV & BH140H38BBV)
13	2-6415	DECAL - CAUTION, Battery Location
14	3-4711	SUPPORT, Fender
15	9-1523	SCREW, 5/16/18 x 5/8" Hex Washer Head, Swage Form (2 ea. on Right Side &
		2 ea. on Left Side for Gear Drive Models Only!) (2 ea. on Left Side for Hydro
		Drive Models Only!) (4)
16	9-1524	SCREW, 5/16-18 x 1 1/4" Hex Washer Head, Swage Form (Used on Right
		Side for Hydro Models Only!) (2)
17	9-1105	SCREW, #10-16 x 1/2" Hex Washer Head, Self-Tapping (4)
18	3-4420	DETENT, Shift (Gear Drive) (30" & 33" Models)
	3-3120	DETENT, Shift (Hydro Drive) (ELT 33", 38", & 42" Models)
19	2-4894	COVER, Shift
20	2-9623	DECAL, Shift Cover, 5-Speed (Gear Drive) (30" & 33" Models)
	1-6576	DECAL, Shift Cover, 5-Speed (Hydro Drive) (30", ELT 33", 38", & 42" Models)
21	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange Lock (3)
22	3-3318	BRACKET, Seat Support
23	3-3435	ROD, Seat Hinge
24	9-1503	PIN, 3/32 x 1 1/2" Hair
25	1-7879	SEAT, Operator's (30" & 33" Models, LT120G30BB & LT125G33BB Only!)
	7-1564	SEAT, Operator's (ELT125G33BB & All Domestic Hydro Models) (Model Year 1995)
	2-8621	SEAT, Operator's (ELT125G33BB & ELT140H33BBV) (Model Year 1996)

#### FRONT AXLE & FRONT WHEEL PARTS

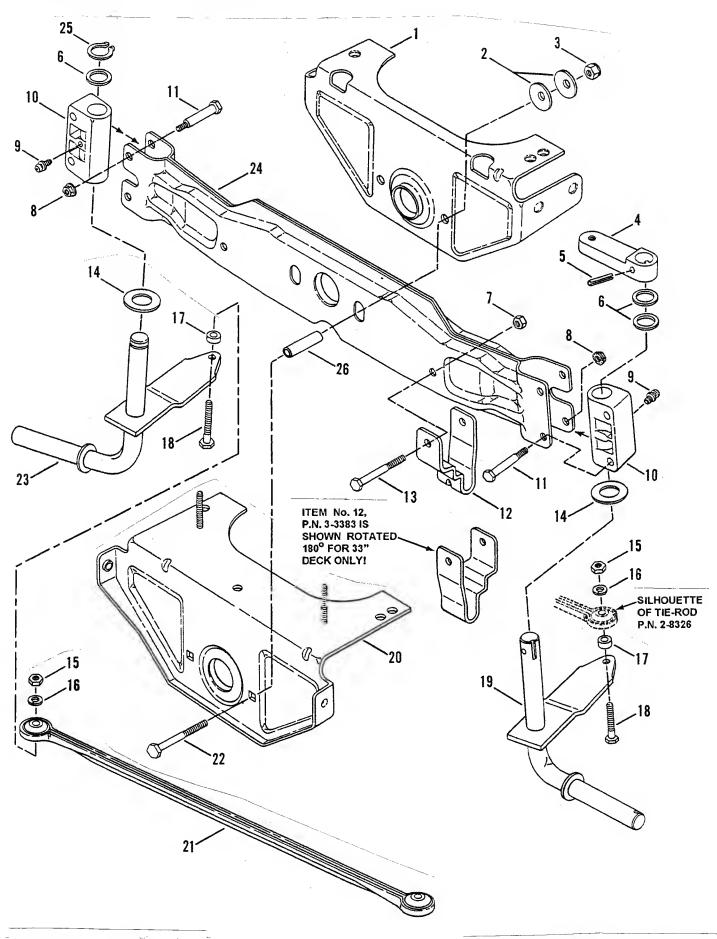


#### FRONT AXLE & FRONT WHEEL PARTS

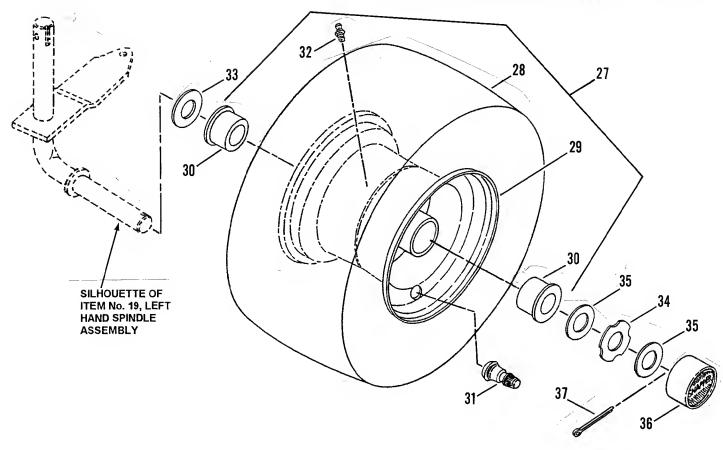

ITE	M DARTNO	DESCRIPTION	ITEM	DARTNO	DESCRIPTION
116			21		
1	3-3374	BRACKET, Axle (Rear)			TIE-ROD
2		WASHER, Cone (4)	22	9-0590	• • • • • • • • • • • • • • • • • • • •
3	7-6979	NUT, 3/8-16 Nyloc (2)	23	4-1245	SPINDLE ASSY., Right Hand, Long
4	1-9034	ARM, Steering			(For 13" Tires - 30" & 33" Decks)
5	9-0842	ROLL-PIN, 1/4 x 1 1/4"	_	4-1251	SPINDLE ASSY., Right Hand, Short
6 7	1-0935	WASHER, Shim (3)			(For 15" Tires - 38" & 42" Decks)
	9-0184	NUT, 5/16-18 Center Lock (2)	24	4-0986	AXLE, Front
8	9-0477	NUT, 1/4-20 Hex Flg. Top-Lock (2)	25	1-0746	RING, Retaining
9	1-3864	FITTING, Lube (2)	26	2-6595	SPACER (2)
10	1-9467	BEARING, Spindle (2)	27	5-2681	ASSEMBLY, Front Tire & Rim, 30"
11	2-2758	BOLT, 1/4-20 x 1 41/64" Shoulder (4)		,	& 33" Decks (Includes items 28 thru 32)
12	3-3383	BRACKET, Deck Hanger (2)	_	5-2957	ASSEMBLY, Front Tire & Rim, 38"
13	9-1046	SCREW, 5/16-18 x 2 1/2" Hex Head			& 42" Decks (Includes items 28 thru 32)
		Cap (2)	28	2-2773	TIRE, 13 x 5.00 (30" & 33" Decks)
14	3-1036	WASHER, Thrust (2)	-	2-6109	TIRE, 15 x 6.00 (38" & 42" Decks)
15	9-1302	NUT, 3/8-16 Hex, Grade 5 (2)	29	2-2772	RIM, 5.50 x 4.00
16	9-1320	WASHER, 3/8 Split Lock (2)	30	1-4483	BEARING, Wheel (2)
17	2-4180	SPACER, Tie-Rod (2)	31	1-2234	VALVE, Air (Snap-In)
18		SCREW, 3/8-16 x 1 1/2" Hex Head	32	1-3876	FITTING, Lube
		Cap, Grade 5 (2)	33	3-4453	WASHER, Flat, .15 x .78 l.D. x 1.5" O.D.
19	4-1246	SPINDLE ASSY., Left Hand, Long	34	2-9618	WASHER, Hub-Cap Retaining
		(For 13" Tires - 30" & 33" Decks)	35	2-9617	WASHER, Flat, .07 x .77 l.D. x 1.31" O.D.(2)
	4-1250	SPINDLE ASSY., Left Hand, Short	36	1-1022	HUB-CAP
	7 1200	(For 15" Tires - 38" & 42" Decks)	37		
20	5-2490	BRACKET ASSEMBLY, Axle (Front)	31	9-1516	COTTER-PIN, 5/32 x 1"
20	J-2790	DIAGRET ACCEMBET, Axie (1 tolit)	1		


## TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS

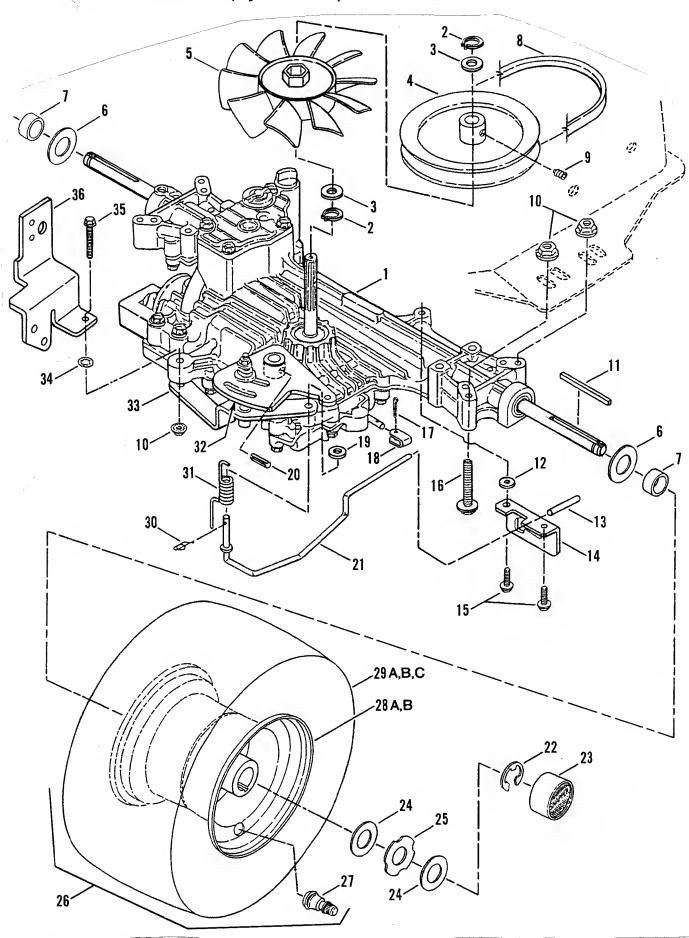

## TRANSMISSION GROUP (Hydro Drive) & REAR WHEELS

2-8083 TRANSAXIE, Hydro Drive, Tuff-Torg Model K50 (Models ELT-140H33BBV, LT140H33BBV, LT140H33BBV, LT140H33BBV, LT140H33BBV, LT155H42BBV)   2-8076	ITEM	PART NO.	DESCRIPTION
2 2-8078 2 1-40H333BBV, LT140H33BBV, LT155H42BBV) 3 2-8034 3 2-8076 4 2-8077 5 2-8076 6 3-4453 6 3-4454 6 3-4453 6 3-4454 6 3-445			
2 2-8078 RING, Retaining (2) 3 2-8087 WASHER, Fain/Hub (2) 4 2-8077 PULLEY, Drive 5 2-8076 FAN 6 3-4453 WASHER, Flat, .132 x. 781 LD. x 1.5 O.D. (2) 7 2-8049 SPACER (2) 8 2-8348 BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H38BBV, LT150H38BV, & LT150H38BV, & LT150H38BV, & LT150H38BV, & LT150H38BV, & LT140H33BBV & ELT140H33BBV, Model Year 1995 Only!) 8 Determine the second of			LT140H33BBV, LT140H38BBV, LT150H38BBV, & LT155H42BBV)
2-8074 VASHER, Fan/Hub (2) 4 2-8076 PULLEY, Drive 5 2-8076 FAN 6 3-4453 WASHER, Flat, 132 x .781 LD .x 1.5 O.D. (2) 2-8049 SPACER (2) 8 2-8049 SPACER (2) 8 2-8049 SPACER (2) 8 LET, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H33BBV, LT150H38BBV, & LT155H42BBV) (Hydro Drive Only!) 1 (Note: This Part No. used on Models LT140H33BBV & ELT140H33BBV) (Model Year 1995 Only!) 9-1277 SETSCREW, 1/4-20 x 5/18* Locking 1 1-7173 KEY, Square, 3/16 x 2/12* (2) 3-2070 WASHER, Flat, 3/4* O.D. 3-4137 GRIP, Roll Release 15 9-1284 SCREW, 3/8-16 x 1 3/4* Self-Tapping (2) 9-1296 WASHER 1-3-4140 WIREFORM, Roll Release 9-1296 WASHER 1-1022 HUB-GA 1-1023 SCSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV & LT155H42BBV) (Includes items 27, 28 & 298)  - 5-2846 ASSEMBLY, Speed Control Arm SPRING - 3-4155 SPRING, Torsion (Roll Release)  - 4-1612 ASSEMBLY, Speed Control Arm SPRING - 3-4155 SPRING, Torsion (Roll Release)  - 3-4157 SPRING, Torsion (Roll Release)  - 3-4158 SPRING, Torsion (Roll Release)  - 3-4179 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)  WELDMENT, Speed Control Arm SPRING - 3-4192 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)  BUSHING, Flange -	2	2-8078	RING, Retaining (2)
5 2-8076 FAN 6 3-4453 WASHER, Flat, .132 x .781 LD. x 1.5 O.D. (2) 7 2-8049 SPACER (2) 8 2-834 BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H33BBV, LT150H33BBV, ELT150H33BBV, ELT150H33BBV, ELT150H33BBV, ELT150H33BBV, ELT150H33BBV, Model Year 1995 Only!) 7 2-8585 BELT, Traction Drive (Models LT140H33BBV & ELT140H33BBV) (Model Year 1995 Only!) 8 1-277 SETSCREW, 1/4-20 x 5/16* Locking 9 9-1277 SETSCREW, 1/4-20 x 5/16* Locking 10 9-1601 NUT, 5/16-16 Hex Flange Lock (5) 11 1-7173 KEY, Square, 3/16 x 3/16 x 2 1/2* (2) 13 -2070 WASHER, Flat, 3/4* ORIP, Roll Release 14 3-4137 GRIP, Roll Release 15 9-1284 SCREW, 3/6-16 x 1 3/4* Self-Tapping (2) 16 9-0702 BOLT, 5/16-18 x 2 1/4* Hex Flange Lock (4) 17 9-1516 COTTER-PIN, 5/32 x 1/4* 18 3-4154 LINK, Roll Release 19 9-1296 WASHER 10 9-1296 WASHER 10 WASHER, Hub-Cap Retaining 11 1-022 11 2-29618 WASHER, Hub-Cap Retaining 11 1-022 12 -29618 WASHER, Hub-Cap Retaining 11 -022 12 -29618 WASHER, Hub-Cap Retaining 11 -024 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28B, & 29B) 1-2234 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29B) 1-2234 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV) & LT155H42BBV) 1 -22403 SCREW, 3/6-16 Self-locking 1 3-4155 SPRING, Torsion (Roll Release) 1 -2306 SPRING, Torsion (Roll Release) 1 -2409 SPRING, Torsion (Roll Release) 2 -2938 STRING, Roll Release) 3 -4162 COTTER-PIN, 5/16 Self-locking 3 -34192 SPRING, Torsion (Roll Release) 3 -4193 SUPPORT, Friction Stud Assembly (Includes Part No's, Listed Below) 3 -41612 SPRING, Torsion (Roll Release) 3 -4178 SUPPORT, Friction Stud Assembly (Includes Part No's, Listed Below) 3 -4179 SUPPORT, Friction Stud Assembly (Includes Part No's, Listed Below) 4 -6112 SPRING, Flange Lock 4 WASHER, Fiction Totul Assembly (Includes Part No's, Listed Below) 5 -2806 SPRING, Torsion (Roll Release) 5 -3380 SUPPORT, Friction Stud Assembly (Includes Part No's, Listed Below) 5 -4179 SPRING, Flange 5 -4179 SPRING, Flange 5 -4179 SPRING, Fl	3	2-8084	
6 3-4453         WASHER, Flat, .132 x .7811.D. x 1.5 O.D. (2)           7 2-8049         SPACER (2)           8 2-8344         BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H33BBV, LT150H38BBV, 8 LT155H42BBV) (Hydro Drive Only!)           - 2-8585         SETSCREW, I/4-20 x 516° Locking           9 9-1277         SETSCREW, I/4-20 x 516° Locking           10 9-1801         NUT, 5/16-18 Hex Flange Lock (5)           11 1-773         KEY, Square, 3/16 x 3/16 x 2 1/2° (2)           12 3-2070         WASHER, Flat, 3/4° O.D.           13 3-4137         GRIP, Roll Release           14 3-4139         DETENT, Roll Release           9 -1924         SCREWA, 3/8-16 x 1 3/4° Self-Tapping (2)           9 -1926         SOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4)           17 9-181         SALTA           18 3-4154         LINK, Roll Release           19 9-1266         WASHER           20 3-4146         ROLLP, NIN, Speed Control Arm           21 3-4140         WIREFORM, Roll Release           22 -9738         RING, Retaining           24 -9617         WASHER, Halt, 07 x .77 I.D. x 1.31 O.D. (2)           24 -9618         WASHER, Hub-Cap Retaining           25 -2845         ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A)		2-8077	PULLEY, Drive
2-8049   SPACER (2)		2-8076	FAN
8         2-8334         BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H33BBV, LT150H32BBV) (Note: This Part No. used on Models LT140H33BBV & ELT140H33BBV Model Year 1995 Only!)           7         2-8585         SETSCREW, 1/4-20 x 5/16* Locking           8         9-1277         SETSCREW, 1/4-20 x 5/16* Locking           10         9-1801         NUT, 5/16-18 kex Flange Lock (5)           11         1-7173         KEY, Square, 3/16 x 3/16 x 2 1/2* (2)           12         3-2070         WASHER, Flat, 3/4* O.D.           13         3-4137         GRIP, Roll Release           15         9-1284         SCREW, 3/8-16 x 1 3/4* Self-Tapping (2)           16         9-0702         BOLT, 5/16-18 x 2 1/4* Hex Flange Lock (4)           17         9-1516         COTTER-PIN, 5/32 x 1**           18         3-4154         LIINK, Roll Release           19         9-1266         WASHER           10         3-4140         WIREFORM, Roll Release           21         2-9738         RING, Retaining           22         2-9738         RING, Retaining           25         2-9617         WASHER, Hub-Cap Retaining           26         2-9618         WASHER, Hub-Cap Retaining           27         1-2234         ASSEMBLY, Rear Tire & Rim (Models			
LT150H38BBV, & LT145H42BBV) (Hydro Drive Only)			
(Note: This Part No. used on Models LT140H33BBV & ELT140H33BBV Model Year 1995 Only!)  9	8	2-8334	BELT, Traction Drive (Models LT140H33BBV, ELT140H33BBV, LT140H38BBV,
2-8585 BELT, Traction Drive (Models LT140H33BBV) & ELT140H33BBV) (Model Year 1996) 9 9-1277 SETSCREW, 1/4-20 x 5/16" Locking NUT, 5/16-18 Hex Flange Lock (5) 11 1-7173 KEY, Square, 3/16 x 3/16 x 2 1/2" (2) 23-2070 WASHER, Flat, 3/4" O.D. 23 3-4137 GRIP, Roll Release 14 3-4139 DETENT, Roll Release 15 9-1284 SCREW, 3/8-16 x 1 3/4" Self-Tapping (2) 26 9-0702 BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4) 27 9-1516 COTTER-PIN, 5/32 x 1" 28 3-4154 LINK, Roll Release 29 1-4169 WASHER 20 3-4140 WIREFORM, Roll Release 20 3-4140 WIREFORM, Roll Release 21 1-022 WASHER, Flat, 07 x .77 l.D. x 1.31 O.D. (2) 22 2-9738 RING, Retaining 23 1-1022 WASHER, Flat, 07 x .77 l.D. x 1.31 O.D. (2) 24 2-9611 WASHER, Flat, 07 x .77 l.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Flat, 07 x .77 l.D. x 1.31 O.D. (2) 26 5-2846 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28B, & 29B) 27 1-2234 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C) 27 1-2244 RING, 8 x 5.375 (Models ELT140H33BBV, & LT155H42BBV) 28 2-4453 RING, 8 x 5.375 (Models ELT140H33BBV, & LT155H42BBV) 29 2-6112 TIRE, 18 x 5.00 (Models ELT140H33BBV & LT140H33BBV) 29 2-6112 TIRE, 18 x 5.00 (Models ELT140H33BBV & LT140H33BBV) 29 3-4162 SPRING, Torsion (Roll Release) 3-4163 WASHER, Flat, 5/16 Self-locking 3-4164 COTTER-PIN, 5/16 Self-locking 3-4165 SPRING 3-5330 SPRING 3-5330 SUPPORT, Friction Stud 3-4178 SUPPORT, Friction Stud			
9 9-1277 SETSCREW, 1/4-20 x 5/16" Locking 9 9-1601 NUT, 5/16-18 Hex Flange Lock (5) 11 1-7173 KEY, Square, 3/16 x 2 1/2" (2) 12 3-2070 WASHER, Flat, 3/4" O.D. 13 3-4137 GRIP, Roll Release 15 9-1284 SCREW, 3/8-16 x 1 3/4" Self-Tapping (2) 16 9-0702 BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4) 17 9-1516 COTTER-PIN, 5/32 x 1" 18 3-4154 LINK, Roll Release 19 9-1296 WASHER 19 9-1296 WASHER 21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Hub-Cap Retaining 25 5-2845 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A) 27 1-223 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28A, & 29A) 28 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT145H42BBV) 29 2-512 TIRE, 18 x 7.50 (Models LT140H33BBV & LT140H33BBV) 29 2-513 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT155H42BBV) 29 2-513 TIRE, 18 x 8.50 (Models ELT140H33BBV & LT155H42BBV) 29 3-4155 SPRING, Torsion (Roll Release) 3 4150 SPRING, Torsion (Roll Release) 3 4151 SPRING, Torsion (Roll Release) 3 4267 WASHER, 120 x 4/06 I.D. x 1.5 O.D. (2) 3 3-4267 WASHER, 120 x 4/06 I.D. x 1.5 O.D. (2) 3 3-4267 WASHER, 120 x 4/06 I.D. x 1.5 O.D. (2) 3 4-161 WELDMENT, Speed Control/Friction (Includes Part No's, Listed Below) 4 1612 WELDMENT, Speed Control/Friction (Includes Part No's, Listed Below) 4 1612 WELDMENT, Speed Control/Friction (Includes Part No's, Listed Below) 4 1612 WASHER, Fiction Pad (2) 3 3-4126 SUPPORT, Friction Stud Assembly (Includes Part No's, Listed Below) 4 1614 WASHER, Fiction Pad (2) 5 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock		0.0505	
10   9-1601   NUT, 5/16-18   Hex Flange Lock (5)			
11 1-7173 KEY, Square, 3/16 x 2 1/2" (2) 2 3-2070 WASHER, Flat, 3/4" O.D. 3 3-4139 DETENT, Roll Release Roll Roll Roll Roll Roll Roll Roll Roll			
12 3-2070 WASHER, Flat, 3/4" O.D. 13 3-4137 GRIP, Roll Release 15 9-1284 SCREW, 3/8-16 x 1 3/4" Self-Tapping (2) 16 9-0702 BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4) 17 9-1516 COTTER-PIN, 5/32 x 1" 18 3-4154 LINK, Roll Release 19 9-1296 WASHER 20 3-4140 WIREFORM, Roll Release 21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, 07 x .77 l.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 WASHER, Hub-Cap Retaining 27 1-2234 VALVE, Air (Snap-in) 28 2-9536 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV) & LT140H33BBV) (Includes items 27, 28h, & 296) 28 2-815 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28h, & 29c) 27 1-2234 VALVE, Air (Snap-in) 28 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 RIM, 8 x 7.00 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 S-4155 Solomos			
13 3-4137 GRIP, Roll Release 15 9-1284 SCREW, 3/8-16 x 1 3/4* Self-Tapping (2) 16 9-0702 BOLT, 5/16-18 x 2 1/4* Hex Flange Lock (4) 17 9-1516 COTTER-PIN, 5/22 x 1* 18 3-4154 LINK, Roll Release 19 9-1296 WASHER 20 3-4146 ROLL-PIN, Speed Control Arm 21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, .07 x .77 I.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 ASEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28B, & 29C) 27 1-2234 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C) 28 2-6113 RIM, 8 x 7.00 (Models LT140H33BBV & LT140H33BBV) 28 2-4453 RIM, 8 x 7.00 (Models LT140H33BBV & LT140H33BBV) 29 2-6112 RIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 S-4165 Self-locking 29 3-4165 SPRING, Torsion (Roll Release) 3-4162 COTTER-PIN, 5/16 Self-locking 3-7 9-0533 SPRING, Torsion (Roll Release) 3-7 9-0533 STUD, Friction 3-4167 SUD, Friction Stud Assembly (Includes Part No's. Listed Below) 3-4168 SUPPORT, Friction Stud 3-4178 SUPPORT, Friction Stud			
14   3-4139   DETENT, Roll Release   SCREW, 3/8-16 x 1 3/4" Self-Tapping (2)			
15			·
16   9-0702   BOLT, 5/16-18 x 2 1/4"   Hex Flange Lock (4)			
17 9-1516 COTTER-PIN, 5/32 x 1" 18 3-4154 LINK, Roll Release 19 9-1296 WASHER 20 3-4146 WIREFORM, Roll Release 21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, .07 x .77 I.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A) 27 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H38BBV) (Includes items 27, 28B, & 29B) 28 2-453 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C) 27 1-2234 VALVE, Air (Snap-in) 28 2-4513 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 29 2-9589 RIM, 8 x 7.00 (Models ELT140H33BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models ELT140H33BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV) 29 2-9589 TIRE, 18 x 9.50 (Model			
18 3-4154 LINK, Roll Release 19 9-1296 WASHER 20 3-4146 ROLL-PIN, Speed Control Arm 21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, .07 x. 77 l.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A) 27 3-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H38BBV) (Includes items 27, 28B, & 29B) 28 3-3563 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C) 27 1-2234 VALVE, Air (Snap-in) 28 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 28 2-4454 RIM, 8 x 7.00 (Models LT140H33BBV & LT140H33BBV) 29 2-6113 TIRE, 18 x 9.50 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 TIRE, 18 x 9.50 (Models LT150H33BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 34 5-4192 STUD, Friction 35 9-1592 SUPPORT, Friction Stud 36 SUPPORT, Friction Stud 37 1-1230 SUPPORT, Friction Stud 38 SUPPORT, Friction Stud 39 1-1791 RETAINER, 5/16 Bolt 30 1-1791 RETAINER, 5/16 Bolt 30 3-4178 SUPPORT, Friction Stud 31 1-1791 RETAINER, 5/16 Bolt 32 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			COTTED DIN 5/32 v 4"
19			
20			
21 3-4140 WIREFORM, Roll Release 22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, .07 x .77 l.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A) 27 5-2846 ASSEMBLY, Rear Tire & Rim (Models LT140H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29B) 28 2-813 RIM, 8 x 5.375 (Models ELT140H33BBV & LT155H42BBV) 29 2-6112 RIM, 8 x 5.00 (Models ELT140H33BBV & LT140H33BBV) 29 2-6113 TIRE, 18 x 7.50 (Models ELT140H33BBV) 29 2-9589 TIRE, 18 x 9.50 (Models ELT140H33BBV) 29 2-9589 ASSEMBLY, Rear Tire & Rim (Models LT140H33BBV) 29 2-9589 TIRE, 18 x 9.50 (Models ELT140H33BBV & LT140H33BBV) 29 2-9589 TIRE, 18 x 9.50 (Models ELT140H33BBV) 29 2-9589 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 29 2-9593 STUD, Friction 29 9-0593 NUT, 3/8-16 Hex Flange Lock 30 3-4162 WASHER, 120 x 406 I.D. x 1.5 O.D. (2) 30 3-4267 WASHER, Friction Stud Assembly (Includes Part No's. Listed Below) 31 3-4357 STUD, Friction Stud Assembly (Includes Part No's. Listed Below) 32 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
22 2-9738 RING, Retaining 23 1-1022 HUB-CAP 24 2-9617 WASHER, Flat, 07 x .77 I.D. x 1.31 O.D. (2) 25 2-9618 WASHER, Hub-Cap Retaining 26 5-2845 WASHER, Hub-Cap Retaining 27 2-8646 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A) 28 2-8563 ASSEMBLY, Rear Tire & Rim (Model LT140H38BBV) (Includes items 27, 28B, & 29B) 29 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C) 27 1-2234 VALVE, Air (Snap-in) 28 A 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 29 A 2-6112 TIRE, 18 x 7.50 (Models ELT140H33BBV, LT155H42BBV) 29 A 2-6113 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Model LT140H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 29 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE, 18 x 9.50 (Models LT160H38BBV) 20 C 2-9589 TIRE,			
1-1022			
24         2-9617         WASHER, Flat, .07 x .77 l.D. x 1.31 O.D. (2)           25         2-9618         WASHER, Hub-Cap Retaining           26         5-2845         ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A)            5-2846         ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)           27         1-2234         ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)           28         2-4453         RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV)           28         2-4454         RIM, 8 x 7.50 (Models ELT140H33BBV, LT150H38BBV, & LT155H42BBV)           29A         2-6112         TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV)           29B         2-6113         TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV)           29C         2-9589         TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV)           30         3-4162         COTTER-PIN, 5/16 Self-locking           31         3-4155         SPRING, Torsion (Roll Release)           32         5-3386         ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below)           34         TILT, 3/42         SPRING           35         SP380         SPRING           34         SPRING         SUPPORT, F			
25 2-9618 WASHER, Hub-Cap Retaining 26 5-2846 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Model LT140H38BBV) (Includes items 27, 28B, & 29B)  - 5-3563 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)  27 1-2234 VALVE, Air (Snap-in) 28A 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 28B 2-4454 RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV) 29A 2-6112 TIRE, 18 x 7.50 (Models LT140H38BBV, & LT140H33BBV) 29B 2-6113 TIRE, 18 x 7.50 (Models LT140H38BBV, & LT155H42BBV) 29B 2-6113 TIRE, 18 x 9.50 (Models LT140H38BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 29C 3-9589 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 SPRING 2-8036 SPRING 3-3-4192 STUD, Friction NUT, 3/8-16 Hex Flange Lock WASHER, 120 x .406 l.D. x 1.5 O.D. (2) WASHER, Friction Pad (2) SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) BUSHING, Flange SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)			
5-2845 ASSEMBLY, Rear Tire & Rim (Models ELT140H33BBV & LT140H33BBV) (Includes items 27, 28A, & 29A)  - 5-2846 ASSEMBLY, Rear Tire & Rim (Model LT140H38BBV) (Includes items 27, 28B, & 29B)  - 5-3563 ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)  27 1-2234 VALVE, Air (Snap-in) 28A 2-4453 RIM, 8 × 5.375 (Models ELT140H33BBV & LT140H33BBV) 28B 2-4454 RIM, 8 × 7.00 (Models LT140H38BBV, LT150H38BBV) 29A 2-6112 TIRE, 18 × 7.50 (Models ELT140H33BBV & LT140H33BBV) 29B 2-6113 TIRE, 18 × 8.50 (Models LT150H38BBV) 29C 2-9589 TIRE, 18 × 9.50 (Models LT150H38BBV) 30 3-4162 OCTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below)  WELDMENT, Speed Control Arm SPRING - 3-4192 STUD, Friction NUT, 3/8-16 Hex Flange Lock WASHER, 120 x .406 l.D. x 1.5 O.D. (2) WASHER, Friction Pad (2) 30 3-4178 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)  BUSHING, Flange SUPPORT, Friction Stud RETAINER, 5/16 Bolt RETAINER, 5/16 Bolt BOLT, 5/16-18 x 2" Hex Flange Lock			
(Includes items 27, 28A, & 29A)  5-2846	26	5-2845	
28B, & 29B) ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)  7 1-2234 XALVE, Air (Snap-in) RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) RIM, 8 x 7.00 (Models LT140H38BBV, LT155H42BBV) RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV) RIRE, 18 x 8.50 (Model LT140H38BBV) RIRE, 18 x 8.50 (Model LT140H38BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT160H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT160H38BBV & LT160H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT160H38BBV & LT160H38BBV & L			(Includes items 27, 28A, & 29A)
28B, & 29B) ASSEMBLY, Rear Tire & Rim (Models LT150H38BBV & LT155H42BBV) (Includes items 27, 28B, & 29C)  7 1-2234 XALVE, Air (Snap-in) RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) RIM, 8 x 7.00 (Models LT140H38BBV, LT155H42BBV) RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV) RIRE, 18 x 8.50 (Model LT140H38BBV) RIRE, 18 x 8.50 (Model LT140H38BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT140H33BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT160H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) RIRE, 18 x 9.50 (Models LT160H38BBV & LT155H42BBV RIPE, 18 x 9.50 (		5-2846	ASSEMBLY, Rear Tire & Rim (Model LT140H38BBV) (Includes items 27,
(Includes items 27, 28B, & 29C)  27 1-2234			
27 1-2234 VALVE, Air (Snap-in) 28A 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 28B 2-4454 RIM, 8 x 7.00 (Models LT140H33BBV, LT150H38BBV, & LT155H42BBV) 29A 2-6112 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29B 2-6113 TIRE, 18 x 8.50 (Models LT140H33BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 5PRING 5TUD, Friction NUT, 3/8-16 Hex Flange Lock WASHER, .120 x .406 l.D. x 1.5 O.D. (2) WASHER, Friction Stud Assembly (Includes Part No's. Listed Below)  BUSHING, Flange SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock		5-3563	
28A 2-4453 RIM, 8 x 5.375 (Models ELT140H33BBV & LT140H33BBV) 28B 2-4454 RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV) 29A 2-6112 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29B 2-6113 TIRE, 18 x 8.50 (Model LT140H38BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 5PRING 3-4192 STUD, Friction NUT, 3/8-16 Hex Flange Lock WASHER, 120 x .406 I.D. x 1.5 O.D. (2) WASHER, Friction Pad (2) 31 3-4178 SUPPORT, Friction Stud 32 5-3380 SUPPORT, Friction Stud 33 5-3380 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
28B 2-4454 RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV) 29A 2-6112 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29B 2-6113 TIRE, 18 x 8.50 (Model LT140H38BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
29A 2-6112 TIRE, 18 x 7.50 (Models ELT140H33BBV & LT140H33BBV) 29B 2-6113 TIRE, 18 x 8.50 (Model LT140H38BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
29B 2-6113 TIRE, 18 x 8.50 (Model LT140H38BBV) 29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			RIM, 8 x 7.00 (Models LT140H38BBV, LT150H38BBV, & LT155H42BBV)
29C 2-9589 TIRE, 18 x 9.50 (Models LT150H38BBV & LT155H42BBV) 30 3-4162 COTTER-PIN, 5/16 Self-locking 31 3-4155 SPRING, Torsion (Roll Release) 32 5-3386 ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below) 4-1612 WELDMENT, Speed Control Arm 2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
30			
31			
32       5-3386       ASSEMBLY, Speed Control/Friction (Includes Part No's. Listed Below)          4-1612       WELDMENT, Speed Control Arm          2-8036       SPRING          3-4192       STUD, Friction          9-0593       NUT, 3/8-16 Hex Flange Lock          9-1331       WASHER, .120 x .406 l.D. x 1.5 O.D. (2)          3-4267       WASHER, Friction Pad (2)         33       5-3380       SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)          1-2306       BUSHING, Flange          3-4178       SUPPORT, Friction Stud         34       1-1791       RETAINER, 5/16 Bolt         35       9-1592       BOLT, 5/16-18 x 2" Hex Flange Lock			
4-1612 WELDMENT, Speed Control Arm 2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
2-8036 SPRING 3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			ASSEMBLY, Speed Control/Enction (Includes Part No's, Listed Below)
3-4192 STUD, Friction 9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
9-0593 NUT, 3/8-16 Hex Flange Lock 9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2) 3-4267 WASHER, Friction Pad (2) 33 5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
<ul> <li>9-1331 WASHER, .120 x .406 I.D. x 1.5 O.D. (2)</li> <li>3-4267 WASHER, Friction Pad (2)</li> <li>5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)</li> <li>1-2306 BUSHING, Flange</li> <li>3-4178 SUPPORT, Friction Stud</li> <li>1-1791 RETAINER, 5/16 Bolt</li> <li>9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock</li> </ul>			
<ul> <li>3-4267 WASHER, Friction Pad (2)</li> <li>5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below)</li> <li>1-2306 BUSHING, Flange</li> <li>3-4178 SUPPORT, Friction Stud</li> <li>1-1791 RETAINER, 5/16 Bolt</li> <li>9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock</li> </ul>			
5-3380 SUPPORT, Friction Stud Assembly (Includes Part No's. Listed Below) 1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
1-2306 BUSHING, Flange 3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
3-4178 SUPPORT, Friction Stud 34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
34 1-1791 RETAINER, 5/16 Bolt 35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock			
35 9-1592 BOLT, 5/16-18 x 2" Hex Flange Lock	34		
	36	3-4400	


## TRANSMISSION GROUP (Gear Drive) & REAR WHEELS

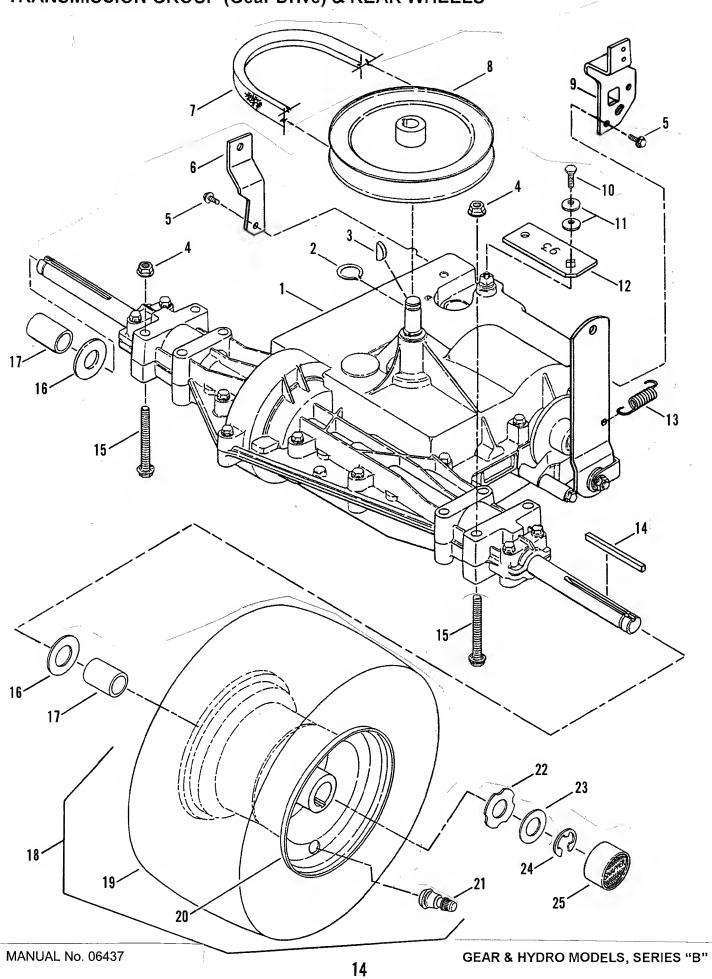

#### TRANSMISSION GROUP (Gear Drive) & REAR WHEELS


ITEM	PART NO.	DESCRIPTION		
1	*205-514	TRANSAXLE, Gear Drive, Peerless Model MST205, 5-Speed		
		(Models LT120G30BB, LT125G33BB, & ELT125G33BB)		
2	1-2763	RING, Retaining		
3	1-0211	KEY, Woodruff, 3/16 x 3/4", No. 9		
4	9-1601	NUT, 5/16-18 Hex Flange Lock (4)		
5	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Head, Self-Tapping (3)		
6	3-3951	BRACKET, Torque		
7	2-9641	BELT, Traction Drive (Models LT120G30BB, LT125G33BB,		
_		& ELT125G33BB) (Gear Drive Only!)		
8	2-4831	PULLEY, Drive		
9	3-4439	BRACKET, Axie/Spool  BOLT 1//-28 y 5/8" Hey Head  *VENDOR PART		
10	9-1165	BOLT, 174-20 X 370 TIEX FICAU		
11	9-0746	VAOITEN, Deliville (2)		
12	3-3754	ARM, Shift Link Lever		
13	2-2437	SPRING, Brake Return		
14	1-7173	KEY, Square, 3/16 x 3/16 x 2 1/2" (2)		
15	9-0702	BOLT, 5/16-18 x 2 1/4" Hex Flange Lock (4)		
16	3-1036	WASHER, Flat (2)		
17	2-4857	SPACER (2)		
18	5-2845	ASSEMBLY, Rear Tire & Rim (Models LT120G30BB, LT125G33BB,		
40	0.0440	& ELT125G33BB) (Includes items 19, 20, & 21)		
19	2-6112	TIRE, 18 x 7.50 (Models LT120G30BB, LT125G33BB, & ELT125G33BB)		
20	2-4453	RIM, 8 x 5.375 (Models LT120G30BB, LT125G33BB, & ELT125G33BB)		
21	1-2234	VALVE, Air (Snap-in)		
22	2-9618	WASHER, Hub-Cap Retaining		
23	2-9617	WASHER, Flat, .07 x .77 I.D. x 1.31 O.D.		
24	1-2705	RING, Retaining		
25	1-1022	HUB-CAP		

#### **BELT GUIDE ASSEMBLY**

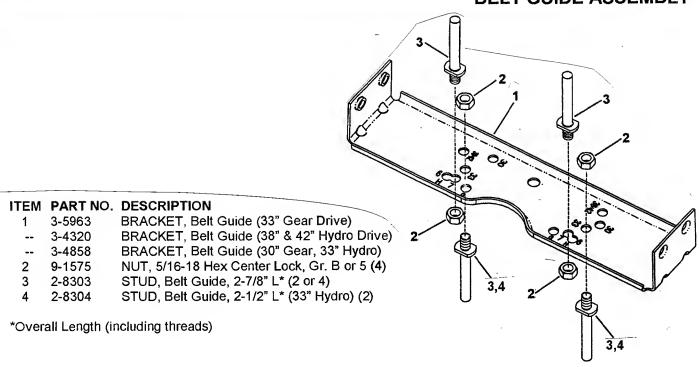

NOTE: ORDER COMPONENTS FOR BELT GUIDE BRACKET INDIVIDUALLY & ASSEMBLE FOR YOUR PARTICULAR MODEL. REFER TO ABOVE EXAMPLE, PAGE 19 DETAIL & THE BELT GUIDE ASSEMBLY ON YOUR TRACTOR.

#### FRAME, CLUTCH, BRAKE & STEERING COMPONENTS

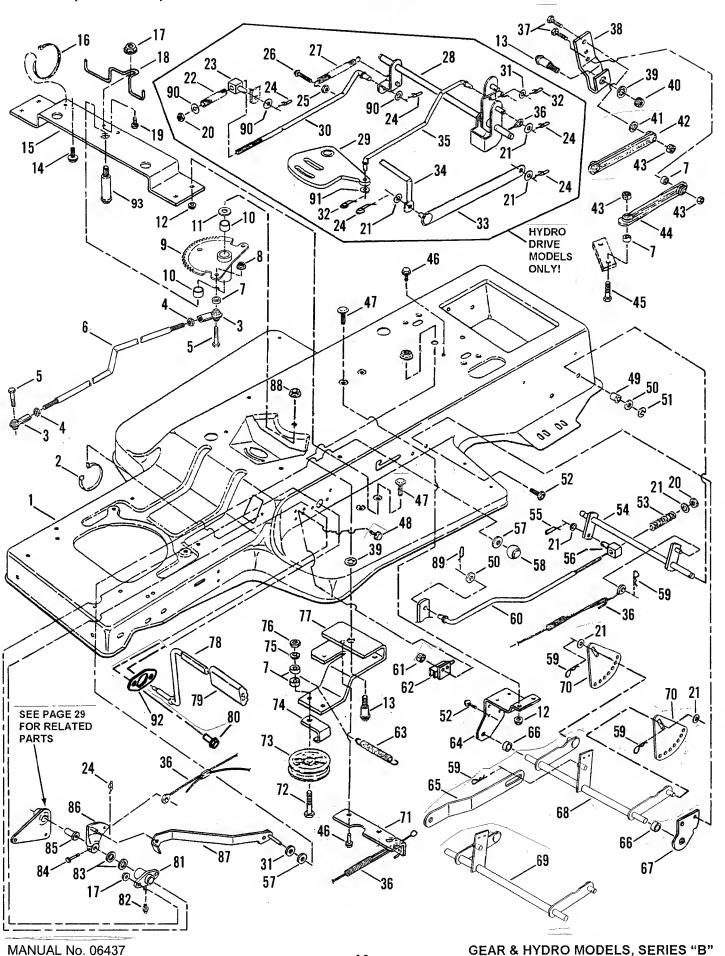


16

#### FRAME, CLUTCH, BRAKE & STEERING COMPONENTS

TITEM   PART NO.   DESCRIPTION   1 3-476   FRAME, Tractor   1 1-4451   Title, Wire   ROD END (2)   1-4451   Title, Wire   ROD END (2)   5 9-0163   SCREW, 39-24 + 11/4"   Head Cap (2)   5 9-0163   SCREW, 39-24 + 11/4"   Head Cap (2)   LINK, Drag   5 -2458   SPRING   SPRING, Brake WELDMENT, Brake Link   WASHER, 3/8 That   Title, Wire   1 1-2476   SPRING   SPRIN	ITEM	DARTNO	DESCRIPTION	Litera	DARTNO	DESCRIPTION
2 1-4451 TIE, Wire 9-0482 NUT, 38-24 Hex Jam (2) 59-0163 SCREW, 38-24 Hex Jam (2) 59-0163 SCREW, 38-24 Hex Jam (2) 59-0163 NUT, 38-24 Hex Jam (2) 55-00163 SCREW, 38-16 Hex Flange Lock (3) 58-00163 NUT, 38-16 Hex Flange Lock (4) 59-0163 NUT, 38-16 Hex Flange Lock (5) 58-2489 WASHER, 5/16 Nylon (2) 58-2439 WASH				1		
3 2-7936 ROD END (2) 4 9-0462 NUT, 33-24 Hex Jam (2) 5 9-0163 SCREW, 33-24 Hex Jam (2) 6 2-4420 LINK, Drag 6 2-24420 LINK, Drag 7 2-4160 SPACER (6) 8 9-0613 NUT, 38-16 Hex Flange Lock 8 9-0613 NUT, 38-16 Hex Flange Lock 9 5-5366 ASSEMBLY, Sector Gear (includes inten 10) 1 1-2706 BEARING, Sector Gear (includes inten 10) 1 1-2706 BEARING, Sector Gear (2) 11 3-1036 WASHER, 34 Thrust 1 9-0931 SOLT, 1/2-13 x 27 Hex Flange Lock (6) 3 2-2381 SOLT, 1/2-13 x 27 Hex Flange Lock (7) 1 9-0931 SOLT, 1/2-13 x 27 Hex Flange Lock (8) 1 9-0955 NUT, 5/16-18 Hex Flange Lock (3) 1 2-2381 SOLT, 5/16-18 Hex Flange Lock (3) 1 2-2381 SOLT, 5/16-18 ASIA* Hex Flange Lock (3) 9 9-0595 SOLT, 5/16-18 ASIA* Hex Flange Lock (3) 9 9-1084 NUT, 5/16-18 Hex Flange Lock (3) 9 9-1084 NUT, 5/16-18 Hex Flange Lock (3) 9 9-1184 NUT, 5/16-18 Hex Flange Lock (3) 9 9-1184 NUT, 5/16-18 Hex Center Lock 9 9-1151 SCREW, 5/16-18 x 1 1/4' Self-Tapp. 1 1-2264 SPRING 2 4-1699 WELDMENT, Brake Arm 4-1703 WELDMENT, Brake Arm 4-1703 WELDMENT, Brake Arm 4-1703 WELDMENT, Brake Arm 4-1703 WELDMENT, Brake Arm 4-1704 ROD, Brake 9-1415 SCREW, 3/8-16-14 (14) H. H. C. (2) 1 9-1628 WELDMENT, Strik Link 1 9-168 WELDMENT, Strik Link 1 9-168 WELDMENT, Strik Link 2 3-4162 NASEMBLY, Citatubrake Cable 3 3-4505 BELLCRANK, Shift Lever (Lower) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				32	9-1001	
4 9-0482 NUT, 3/6-24 Hex Jam (2) 5 9-0163 SCREW, 3/6-24 x 1 1/4" Hex Head Cap (2) LINK, Drag 5 2-44180 SPACER (5) 8 9-0613 NUT, 3/8-16 Hex Flange Lock 9 5-3568 ASSEMBLY, Sector Gear (Includes item 10) 10 1-2706 BEARING, Sector Gear (Includes item 10) 10 1-2706 BEARING, Sector Gear (C) 11 3-1036 WASHER, 3/4 Thusu 52 2-2818 BOLT, 1-2-13 x 2" Hex Flange Lock (B) 3 -2-2818 BOLT, 1-2-13 x 2" Hex Flange Lock (B) 13 -2-281 BOLT, 1-2-13 x 2" Hex Flange Lock (B) 14 9-0913 SCREW, #10-24 x 1/2" S.T. (Torx) 15 3-3927 BRACE, Sector Gear (B) 16 1-2808 Tile, Cable 17 9-0958 NUT, 5/16-18 Hex Flange Lock (C) 18 9-0959 SWIVEL, Briake Briake 19 9-0959 WELDMENT, Brake Arm (LT140H33BBV) 19 1-2264 SCREW, 5/16-18 kt 1/4" Self-Tapp. 29 9-1159 VELDMENT, Brake Arm (LT140H33BBV) 29 4-1612 ARM, Transmission Speed Control ROD, Brake 29 4-1619 ASSEMBLY, Shift Lever (Lower) 30 4-1690 WELDMENT, Brake Arm (LT140H33BBV) 30 2-2614 ASSEMBLY, Shift Lever (Lower) 31 4-1590 WELDMENT, Brake Arm (LT140H33BBV) 32 3-4169 INIX, Speed (LT140H33BBV) 33 3-3555 BELLCRANK, Shift Lever (Lower) 34 4-1590 NUT, 3/8-16 Hex Center Lock (C) 35 3-4159 LINK, Speed (LT140H33BBV) 36 2-4116 ASSEMBLY, Shift Lever (Lower) 37 9-018 WASHER, 3/6 Flat (C) 39 9-0599 WASHER, 3/6 Flat (C) 39 9-0599 NUT, 1/1-21 Hex Flange Lock (C) 39	3			52	2 /281	
5 9-0163 SCREW, 3/8-24 x 1 1/4" Hex Head Cap (2) 6 2-8420 LINK, Drag 7 2-4160 SPACER (5) 8 9-0613 NUT, 3/8-16 Hex Flange Look 8 9-0613 NUT, 3/8-16 Hex Flange Look 9 5-3568 ASSEMBLY, Sector Gear (Includes item 10) 10 1-2706 BEARING, Sector Gear (Includes item 10) 11 3-1036 WASHER, 3/4 Thrust 12 9-0583 NUT, 1/4-20 Hex Flange Look (6) 13 2-2381 BOLT, 1/2-13 x 2" Hex Fing, Lk. (2) 14 9-0513 SCREW, #10-24 x 1/2" S.T. (Torx) 15 3-3627 BRACE, Sector Gear (2) 16 1-2080 TIE, Cable 1-2080 NUT, 3/8-16 Hex Flange Look (3) 17 9-0585 NUT, 3/8-16 Hex Flange Look (3) 18 2-2314 GUIDE, Drive Bett 19 9-0599 BOLT, 5/16-18 x 13/4" Hex Fing, Lk. 20 9-1299 NUT, 3/8-16 Hex Nyloc 21 9-0122 WASHER, 3/6 Flat (7) 22 2-8091 SPRING, Brake 24 9-1593 PIN, 3/64 x 1 7/32" Cotter (Self-Lkg.) 9-1151 SCREW, 5/16-18 k at 14/4" Self-Tapp. 25 9-0144 NUT, 3/16-18 Hex Center Look 26 9-1151 SCREW, 5/16-18 k at 14/4" Self-Tapp. 27 1-2264 SPRING 28 4-1589 WELDMENT, Brake Arm (LT140H33BBV) 28 4-1519 ARM, Transmission Speed Control 29 4-1512 ARM, Transmission Speed Control 20 2-8034 ROD, Brake 21 3-4162 PIN, 5/16 Cetter, Self-looking (2) 24 4-1590 ASSEMBLY, Clitcit/Brake Cable 25 3-4162 PIN, 5/16 Cotter, Self-looking (2) 25 4-155 SELLCAMK, Shift Lever (Lower) 26 4-115 ASSEMBLY, Clitcit/Brake Cable 27 3-1264 LINK, Speed LINK, 2/14 Lever (Lower) 28 4-1590 ASSEMBLY, Shift Lever (Lower) 29 4-151 SCREW, 3/8-16 thex Center Look 30 3-3555 BELLCARMK, Shift Lever 41 9-0118 WASHER, 5/16 Flat 41 9-0118 WASHER, 3/8 Split Look (2) 41 9-0123 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 42 -2426 LINK, Shift Lever 41 9-0118 WASHER, 3/8 Split Look (2) 42 -2426 LINK, Shift Lever 43 9-1580 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 44 9-0118 WASHER, 3/8 Split Look (2) 45 9-1680 SWELDMENT, Brake Arm (LT140H33BBV) 46 9-0590 WASHER, 1/2 Internal Tooth Lk. (2) 47 9-0803 BOLT, 1/4-20 x 5/8" H. W. H. (2) 48 9-1591 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 49 9-0803 BOLT, 1/4-20 x 5/8" H. W. H. (2) 49 9-0803 BOLT, 1/4-20 x 5/8" H. W. H. (2) 49 9-0803 BOLT, 1/4-20 x 5/8" H. W. H. (2) 49 9-0803 BOLT, 1/4-2						
Head Cap (2)						
6 2-8420 LINK, Drag 7 2-4180 SPACER (5) 8 9-0613 NUT, 3/8-16 Hex Flange Lock 9 5-366 ASSEMBLY, Sector Gear (Includes item 10) 1-2706 BEARING, Sector Gear (Includes item 10) 2 9-0583 NUT, 14/20 Hex Flange Lock (6) 3 -1305 NASHER, 3/4 Thrust 2 9-0583 NUT, 14/20 Hex Flange Lock (7) 3 -22381 BOLT, 1/2-13 x 2" Hex Flange Lock (8) 3 2-2381 BOLT, 1/2-13 x 2" Hex Flange Lock (8) 3 2-2381 SORIEW, #10-24 x 1/2" S.T. (Torx) 5 3-827 BRACE, Sector Gear (2) 4 9-0913 SORIEW, #10-24 x 1/2" S.T. (Torx) 5 3-827 BRACE, Sector Gear (2) 4 9-0913 SORIEW, #10-24 x 1/2" S.T. (Torx) 5 3-827 BRACE, Sector Gear (2) 4 9-0913 SORIEW, #10-24 x 1/2" S.T. (Torx) 5 3-827 BRACE, Sector Gear (2) 6 9-018 BRACE, Sector Gear (2) 6 9-018 NUT, 3/8-16 Hex Flange Lock (3) 8 QUIDE, Drive Beit 9 9-0599 BOLT, 51/6-18 x 14/4" Hex Fling, Lk. 2 9-1991 VIIT, 3/8-16 Hex Nylicc 2 2-8091 SPRING, Brake 2 9-1593 SWINCE, Inline Brake 3 9-1593 SWIVEL, Brake Arm (LT140H33BBV) 4 -1590 WELDMENT, Brake Arm (LT140H33BBV) 5 9-0148 VASHER, 3/6 Flat 3 9-0148 WASHER, 3/6 Flat 3 9-0148 WASHER, 3/6 Flat 3 3-4159 UNK, Speed (LT140H33BBV) 4 5-2920 ASSEMBLY, Shift Lever (Lower) 5 3-4159 UNK, Speed (LT140H33BBV) 6 2-4118 ASSEMBLY, Clutch/Brake Cable 4 9-0918 WASHER, 3/6 Flat (7) 7 3-4504 UNINK, Speed (LT140H33BBV) 8 4-1590 WELDMENT, Brake Arm (LT140H33BBV) 8 5-2920 ASSEMBLY, Shift Lever (Lower) 1 9-0148 WASHER, 5/16 Flat 3 3-4159 UNK, Speed (LT140H33BBV) 4 5-2920 ASSEMBLY, Shift Lever (Lower) 1 100 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 3 3-4159 UNK, Speed (LT140H33BBV) 4 5-2920 ASSEMBLY, Clutch/Brake Cable 4 9-0918 WASHER, 1/2 Internal Tooth Lk. (2) 4 9-018 WASHER, 3/6 Self-Tap, 1/2 14 Hex Flange Lock (2) 4 9-018 WASHER, 1/2 Internal Tooth Lk. (2) 4 9-018 WASHER, 1/2 Internal Tooth Lk. (2) 4 9-018 WASHER, 1/2 Internal Tooth Lk. (2) 4 9-018 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 5 9-0184 UNIN, Speed (LT140H33BBV) 5 BELLT140H33BBV (Model Year 1996) 5 BELLT140H33BBV (Model Year 1996) 6 2-4115 ASSEMBLY, Clutch/Brake Cable 6 9-0361 DLT, 1/4-20 x 5/8" H. W. H. (2) 6 9-150 SCREW, 3/8-16 x 1 1	5	9-0103		55	2-40/4	
7 2-4180 SPACER (5) 8 9-0613 NUT, 3/8-16 Hex Flange Lock 8 9-0613 NUT, 3/8-16 Hex Flange Lock 18 9-053568 ASSEMBLY, Sector Gear (Includes lemin 10) 10 1-2706 BEARING, Sector Gear (2) 11 3-1036 WASHER, 3/4 Thrust 12 9-0583 NUT, 1/4-20 Hex Flange Lock (6) 13 -22381 BOLT, 1/2-13 x 2' Hex Flng, Lk. (2) 14 9-0913 SCREW, 4/10-24 x 1/2' ST. (Tonx) 15 3-3627 BRACE, Sector Gear 16 1-2000 TIE, Cable 17 9-0585 NUT, 5/16-18 Hex Flange Lock (3) 18 2-8314 GUIDE, Drive Belt 19 9-0595 BOLT, 5/16-18 x 3/4" Hex Flng, Lk. 19 9-0595 BOLT, 5/16-18 x 3/4" Hex Flng, Lk. 20 9-1299 NUT, 3/8-16 Hex Nyloc 21 9-0122 WASHER, 3/8 Flat (7) 9-0591 SOREW, 3/8-16 Hex Plange Lock (3) 21 9-0122 WASHER, 3/8 Flat (7) 9-0592 WASHER, 3/8 Flat (7) 9-0702 WASHER, 3/8 Flat (7) 9-0703 PIN, 3/40 x 1 7/32" Cotter (Self-Lkg.) 23 2-8037 SWIVVEL, Inline Brake 24 9-1593 PIN, 3/6 x 1 7/32" Cotter (Self-Lkg.) 25 9-0184 NUT, 5/16-18 hex Center Lock 26 9-1513 SCREW, 5/16-16 x 1 1/4" Self-Tapp. 27 1-2246 SPRING 28 4-1589 WELDMENT, Brake Arm (LT140H33BBV & ELT125G33BB, LT125G33BB, LT125G33	e	0.0400		50	0.4590	
8 9-0613 NUT, 3/8-16 Hex Flange Lock   58						
S-3568				4		
Item 10  1 - 2706			•			
10	9	5-3568				
11   3-1036   WASHER, 3/4 Thrust   62   2-3355   SWITCH	40	4 0700				
12   9-0563 NUT, 1/4-20 Hex Fliange Lock (6)   63   2-4383 SPRING				1		
2-2381 BOLT, 1/2-13 x 2" Hex Fing, Lik. (2)						
14   9-0913   SCREW, #10-24 x 1/2" S.T. (Torx)   5   3-4850   LITIK, Lift (Models: LT140H38BBV, LT155H32BV)   LT150H32BBV, & LT155H32BBV, & LT159H32BBV, & LT140H33BBV, & LT159H32BBV, & LT159H32BV, & LT159H32BBV, & LT159H32BV, & LT159H32BBV, & LT159H32BV, & LT159H32BV, & LT159H32BBV, & LT159H32BV, & LT159H3						
15			BOLT, 1/2-13 x 2" Hex Fing. Lk. (2)			
16				65	3-4850	
17   9-0585   NUT, 5/16-18 Hex Flange Lock (3)   2-8314   GUIDE, Drive Belt   19   9-0595   BOLT, 5/16-18 x 3/4" Hex Flng. Lk.   3-4386   LINK, Lift (Model: LT120G30BB)   SPACER (2)   9-1299   NUT, 3/8-16 Hex Nyloc   66   3-4384   SPACER (2)   2-8091   SPRING, Brake   68   4-1256   WELDMENT, Rear Lift (Models: LT140H33BBV, & LT155H42BBV)   Weldels: NUT, 5/16-18 Hex Center Lock   4-1590   WELDMENT, Brake Arm   LT140H33BBV, & LT155H42BBV)   WELDMENT, Brake Arm   LT140H33BBV, & LT155H42BBV)   WELDMENT, Brake Arm   LT140H33BBV   WELDMENT, Shift Link   WASHER, 5/16 Flat   WASHER, 5/16 Flat   WASHER, 5/16 Flat   WASHER, 5/16 Flat   WELDMENT, Shift Link   WELDMENT,						
18					3-4347	
19   9-0595   BOLT, 5/16-18 x 3/4" Hex Fing. Lk.				1		ELT125G33BB, LT140H33BBV, &
20   9-1299   NUT, 3/8-16 Hex Nyloc   66   3-4384   SPACER (2)				1		ELT140H33BBV)
21			BOLT, 5/16-18 x 3/4" Hex Flng. Lk.		3-4386	LINK, Lift (Model: LT120G30BB)
22   2-8091   SPRING, Brake   68   4-1256   WELDMENT, Rear Lift (Models: LT140H38BBV, & LT150H38BBV, & LT150H38BBV, & LT150H38BBV, & LT155H42BBV)	20	9-1299		66	3-4384	SPACER (2)
22   2-8091   SPRING, Brake   68   4-1256   WELDMENT, Rear Lift (Models: LT140H38BBV, & LT150H38BBV, & LT150H38BBV, & LT150H38BBV, & LT155H42BBV)	21	9-0122	WASHER, 3/8 Flat (7)	67	3-3520	BRACKET, Deck Hang Pivot
24   9-1593   SWIVEL, Inline Brake   9-1593   PIN, 3/64 x 1 7/32" Cotter (Self-Lkg.)   PIN, 5/16-18 k x 1 1/4" Self-Tapp.   PIN Self-Tapp.	22	2-8091		68	4-1256	WELDMENT, Rear Lift (Models:
24	23	2-8037	SWIVEL, Inline Brake			
25   9-0184   NUT, 5/16-18   Hex Center Lock   26   9-1151   SCREW, 5/16-18 x 1 1/4" Self-Tapp.   27   1-2264   SPRING   SPRING   WELDMENT, Brake Arm (LT140H33BBV   & LT140H33BBV)   WELDMENT, Brake Arm (LT140H33BBV   & LT140H33BBV)   & LET140H33BBV   Model Year 1996		9-1593		1		
26 9-1151 SCREW, 5/16-18 x 1 1/4" Self-Tapp. 27 1-2264 SPRING 28 4-1589 WELDMENT, Brake Arm 29 4-1612 ARM, Transmission Speed Control 30 2-8034 ROD, Brake 31 9-0188 WASHER, 5/16 Flat 32 3-4162 PIN, 5/16 Cotter, Self-locking (2) 33 4-1590 WELDMENT, Shift Link 45 5-2920 ASSEMBLY, Shift Lever (Lower) 46 9-0143 SCREW, 3/8-16 x 1 1/2" H. H. C. (2) 47 9-0803 BLCRANK, Shift Lever 48 9-1585 NUT, 3/8-16 hex Caphe 49 9-1585 NUT, 3/8-16 hex Caphe 40 9-0619 NUT, 1/2-13 Hex Flange Lock (2) 41 9-0118 WASHER, 3/8 Split Lock (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 hex Caphe 44 2-5041 LINK, Shift Lever 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 47 9-0803 BLCRANK, Pinc Lock (3) 48 9-1240 SCREW, 3/8-16 x 1 1/2" H. H. C. 49 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 40 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 41 9-0118 WASHER, 1/2 Internal Tooth Lk. (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 hex Caphe 44 2-5041 LINK, Spift Lever 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 47 9-0803 BCLT 1/4-20 x 5/8" Self-Tap (3) 48 9-1240 SCREW, #10-32 x 5/8" H. W. H. (2) 49 1-1016 BEARING, Nylon (2) 40 9-1587 WASHER, 1/2 Flat 50 9-1587 WASHER, 1/2 Flat 50 9-1587 WASHER, 1/2 Flat 50 9-1587 WASHER, 1/2 External Retaining (2)		9-0184		69	4-1249	
1-2264   SPRING						
28         4-1589         WELDMENT, Brake Arm         (LT140H33BBV)            4-1703         WELDMENT, Brake Arm (LT140H33BBV)         70         3-4377         PLATE, Lift Sector (2)           29         4-1612         ARM, Transmission Speed Control         72         9-1560         SCREW, 3/8-16 x 2 1/4" Hex           30         2-8034         ROD, Brake         72         9-1560         SCREW, 3/8-16 x 2 1/4" Hex           31         9-0188         WASHER, 5/16 Flat         73         2-3954         PULLEY           32         3-4162         PIN, 5/16 Cotter, Self-locking (2)         74         3-3556         GUIDE, Pulley           33         4-1590         WELDMENT, Shift Lever (Lower)         75         9-1320         WASHER, 3/8 Split Lock           34         5-2920         ASSEMBLY, Shift Lever (Lower)         76         9-1320         NUT, 3/8-16 Hex           3-4704         LINK, Speed (LT140H33BBV)         78         2-2743         PEDAL, Park Brake           37         9-0143         SCREW, 3/8-16 x 1 1/4" H. H. C. (2)         80         9-1000         SCREW, 3/8-16 x 7/8" Truss Head           37         9-0143         SCREW, 3/8-16 x 1 1/2" H. H. C. (2)         81         5-2431         ASSEMBLY, Foot Shaft Pivot (Incides item 82)						
4-1703 WELDMENT, Brake Arm (LT140H33BBV)				1		
## LT140H33BBV) (Model Year 1996) ## 4-1612 ARM, Transmission Speed Control ## 2-8034 ROD, Brake ## 31 9-0188 WASHER, 5/16 Flat ## 32 3-4162 PIN, 5/16 Cotter, Self-locking (2) ## 3-34596 GUIDE, Pulley ## 3-3556 GUIDE, Pull			·	70	3-4377	
29         4-1612         ARM, Transmission Speed Control         72         9-1560         SCREW, 3/8-16 x 2 1/4" Hex Head Cap           30         2-8034         ROD, Brake         73         2-3954         PULLEY           31         9-0188         WASHER, 5/16 Flat         73         2-3954         PULLEY           32         3-4162         PIN, 5/16 Cotter, Self-locking (2)         74         3-3556         GUIDE, Pulley           33         4-1590         WELDMENT, Shift Link         75         9-1320         WASHER, 3/8 Split Lock           34         5-2920         ASSEMBLY, Shift Lever (Lower)         76         9-1302         NUT, 3/8-16 Hex           35         3-4159         LINK, Speed         77         3-3557         ARM, Idler (Traction Drive)           36         2-4115         ASSEMBLY, Clutch/Brake Cable         78         2-2743         PEDAL, Park Brake           37         9-0143         SCREW, 3/8-16 x 1 1/4" H. H. C. (2)         80         9-1000         SCREW, 3/8-16 x 7/8" Truss Head           38         3-3555         BELLCRANK, Shift Lever         81         5-2431         ASSEMBLY, Foot Shaft Pivot           39         9-0509         WASHER, 1/2 Internal Tooth Lk. (2)         81         5-2431         ASSEMBLY, Foot Sha						
30	29	4-1612	, ,			
31 9-0188 WASHER, 5/16 Flat 32 3-4162 PIN, 5/16 Cotter, Self-locking (2) 33 4-1590 WELDMENT, Shift Link 34 5-2920 ASSEMBLY, Shift Lever (Lower) 35 3-4159 LINK, Speed 36 2-4115 ASSEMBLY, Clutch/Brake Cable 37 9-0143 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 38 3-3555 BELLCRANK, Shift Lever 39 9-0509 WASHER, 1/2 Internal Tooth Lk. (2) 40 9-0619 NUT, 1/2-13 Hex Flange Lock (2) 41 9-0118 WASHER, 3/8 Split Lock (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 Hex Center Lock (3) 44 2-5041 LINK, Shift Lever (Twisted) 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 47 9-0803 BOLT, 1/4-20 x 5/8" Self-Tap (3) 48 9-1240 SCREW, #10-32 x 5/8" H. W. H. (2) 49 9-1587 WASHER, 1/2 Flat 50 9-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2) 57 3-3555 GUIDE, Pulley 75 9-1320 WASHER, 3/8 Split Lock 76 9-1320 WASHER, 3/8 Split Lock 77 3-3557 ARM, Idler (Traction Drive) 78 2-2743 PEDAL, Park Brake 79 1-2661 PAD, Pedal 79 9-1000 SCREW, 3/8-16 x 7/8" Truss Head 79 1-2661 PAD, Pedal 80 9-1000 SCREW, 3/8-16 x 7/8" Truss Head 80 9-1000 SCREW, 4/10 x 1/4" H. H. C. (2) 81 1-4871 FITTING, Lube 81 2-2431 ASSEMBLY, Foot Shaft Pivot 82 1-4871 FITTING, Lube 83 1-5992 WASHER, 1/2 Clevis 84 2-3645 PIN, 3/16 x 1 1/2" Clevis 85 2-2742 BEARING, Flang 86 4-1236 ASSEMBLY, Clutch Brake Arm 87 4-1244 LATCH, Park Brake 89 9-1594 PIN, 1/16 x 1 27/64 Cotter (Self-Locking) 89 9-1594 WASHER, 3/8 Flat 99 9-1596 WASHER, 1/32" Flat G				}	0 .000	
32				73	2-3954	
33						
34         5-2920         ASSEMBLY, Shift Lever (Lower)         76         9-1302         NUT, 3/8-16 Hex           35         3-4159         LINK, Speed         77         3-3557         ARM, Idler (Traction Drive)            3-4704         LINK, Speed (LT140H33BBV) (Model Year 1996)         78         2-2743         PEDAL, Park Brake           36         2-4115         ASSEMBLY, Clutch/Brake Cable         80         9-1000         SCREW, 3/8-16 x 7/8" Truss Head           37         9-0143         SCREW, 3/8-16 x 1 1/4" H. H. C. (2)         80         9-1000         SCREW, 3/8-16 x 7/8" Truss Head           39         9-0509         WASHER, 1/2 Internal Tooth Lk. (2)         81         5-2431         ASSEMBLY, Foot Shaft Pivot (Includes item 82)           41         9-0118         WASHER, 3/8 Split Lock (2)         82         1-4871         FITTING, Lube           42         2-4286         LINK, Shift Lever         84         2-3645         PIN, 3/16 x 1 1/2" Clevis           43         9-1585         NUT, 3/8-16 Hex         85         2-2742         BEARING, Flange           44         2-5041         LINK, Shift Lever (Twisted)         85         2-2742         BEARING, Flange           45         9-1497         SCREW, 3/8-16 x 1 1/2" H. H. C.         8						
35			· · · · · · · · · · · · · · · · · · ·			
3-4704 LINK, Speed (LT140H33BBV & ELT140H33BBV) (Model Year 1996)  36 2-4115 ASSEMBLY, Clutch/Brake Cable 37 9-0143 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 38 3-3555 BELLCRANK, Shift Lever 39 9-0509 WASHER, 1/2 Internal Tooth Lk. (2) 40 9-0619 NUT, 1/2-13 Hex Flange Lock (2) 41 9-0118 WASHER, 3/8 Split Lock (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 Hex Center Lock (3) 44 2-5041 LINK, Shift Lever (Twisted) 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 5/16-18 x 5/8" Self-Tap (3) 47 9-0803 BOLT, 1/4-20 x 5/8" Carriage (6) 48 9-1240 SCREW, #10-32 x 5/8" H. W. H. (2) 49 1-1016 BEARING, Nylon (2) 50 9-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2)  78 2-2743 PEDAL, Park Brake 79 1-2661 PAD, Pedal 80 9-1000 SCREW, 3/8-16 x 7/8" Truss Head (Torx) (2) 81 5-2431 ASSEMBLY, Foot Shaft Pivot (Includes item 82) 82 1-4871 FITTING, Lube 83 1-5992 WASHER, 5/8 Flat (2) 84 2-3645 PIN, 3/16 x 1 1/2" Clevis 85 2-2742 BEARING, Flange 86 4-1236 ASSEMBLY, Clutch Brake Arm 87 4-1244 LATCH, Park Brake 88 9-0975 NUT, 1/2-13 Hex Center Lock 89 9-1594 PIN, 1/16 x 1 27/64 Cotter (Self-Locking) 90 9-1514 WASHER, 3/8 Flat 91 9-1296 WASHER, 11/32" Flat Grade 5 91 9-1296 WASHER, Pivot- Stiffener				1		
8 ELT140H33BBV) (Model Year 1996) 36 2-4115 ASSEMBLY, Clutch/Brake Cable 37 9-0143 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 38 3-3555 BELLCRANK, Shift Lever 39 9-0509 WASHER, 1/2 Internal Tooth Lk. (2) 40 9-0619 NUT, 1/2-13 Hex Flange Lock (2) 41 9-0118 WASHER, 3/8 Split Lock (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 Hex Center Lock (3) 44 2-5041 LINK, Shift Lever (Twisted) 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 3/8-16 x 1 1/2" H. H. C. 47 9-0803 BOLT, 1/4-20 x 5/8" Self-Tap (3) 48 9-0975 NUT, 1/2-13 Hex Center Lock 49 1-1016 BEARING, Nylon (2) 49 1-1016 BEARING, Nylon (2) 50 9-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2) 50 9-1587 WASHER, 1/2 External Retaining (2) 50 9-1587 WASHER, 1/2" External Retaining (2) 50 9-1587 WASHER, 1/2" External Retaining (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 9-1587 WASHER, 1/2" External Retaining (2) 50 9-1587 WASHER, 1/2" External Retaining (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 9-1587 WASHER, 1/2" External Retaining (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 P-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 SCREW, 3/8-16 x 1 1/4" H. H. C. (2) 50 P-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2)						
36       2-4115       ASSEMBLY, Clutch/Brake Cable       80       9-1000       SCREW, 3/8-16 x 7/8" Truss Head         37       9-0143       SCREW, 3/8-16 x 1 1/4" H. H. C. (2)       81       5-2431       ASSEMBLY, Foot Shaft Pivot         38       3-3555       BELLCRANK, Shift Lever       81       5-2431       ASSEMBLY, Foot Shaft Pivot         39       9-0509       WASHER, 1/2 Internal Tooth Lk. (2)       82       1-4871       FITTING, Lube         40       9-0619       NUT, 1/2-13 Hex Flange Lock (2)       83       1-5992       WASHER, 5/8 Flat (2)         41       9-0118       WASHER, 3/8 Split Lock (2)       83       1-5992       WASHER, 5/8 Flat (2)         42       2-4286       LINK, Shift Lever       84       2-3645       PIN, 3/16 x 1 1/2" Clevis         43       9-1585       NUT, 3/8-16 Hex Center Lock (3)       85       2-2742       BEARING, Flange         44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47		3-4704				
37   9-0143   SCREW, 3/8-16 x 1 1/4" H. H. C. (2)   38   3-3555   BELLCRANK, Shift Lever   81   5-2431   ASSEMBLY, Foot Shaft Pivot (Includes item 82)   40   9-0619   NUT, 1/2-13 Hex Flange Lock (2)   82   1-4871   FITTING, Lube   41   9-0118   WASHER, 3/8 Split Lock (2)   83   1-5992   WASHER, 5/8 Flat (2)   42   2-4286   LINK, Shift Lever   84   2-3645   PIN, 3/16 x 1 1/2" Clevis   43   9-1585   NUT, 3/8-16 Hex Center Lock (3)   85   2-2742   BEARING, Flange   44   2-5041   LINK, Shift Lever (Twisted)   86   4-1236   ASSEMBLY, Clutch Brake Arm   45   9-1497   SCREW, 3/8-16 x 1 1/2" H. H. C.   87   4-1244   LATCH, Park Brake   46   9-0361   SCREW, 5/16-18 x 5/8" Self-Tap (3)   88   9-0975   NUT, 1/2-13 Hex Center Lock   47   9-0803   BOLT, 1/4-20 x 5/8" Carriage (6)   89   9-1594   PIN, 1/16 x 1 27/64 Cotter (Self-Locking)   49   1-1016   BEARING, Nylon (2)   90   9-1514   WASHER, 3/8 Flat   91   9-1296   WASHER, 11/32" Flat Grade 5   51   1-4341   RING, 1/2" External Retaining (2)   92   4-6778   WASHER, Pivot- Stiffener	26	2 4115	, ,			·
38				٥٥	9-1000	
9-0509 WASHER, 1/2 Internal Tooth Lk. (2) 40 9-0619 NUT, 1/2-13 Hex Flange Lock (2) 41 9-0118 WASHER, 3/8 Split Lock (2) 42 2-4286 LINK, Shift Lever 43 9-1585 NUT, 3/8-16 Hex Center Lock (3) 44 2-5041 LINK, Shift Lever (Twisted) 45 9-1497 SCREW, 3/8-16 x 1 1/2" H. H. C. 46 9-0361 SCREW, 5/16-18 x 5/8" Self-Tap (3) 47 9-0803 BOLT, 1/4-20 x 5/8" Carriage (6) 48 9-1240 SCREW, #10-32 x 5/8" H. W. H. (2) 49 1-1016 BEARING, Nylon (2) 49 1-4341 RING, 1/2" External Retaining (2) 40 1-4871 FITTING, Lube 41 1-4871 FITTING, Lube 42 1-4871 FITTING, Lube 43 1-5992 WASHER, 5/8 Flat (2) 44 2-3645 PIN, 3/16 x 1 1/2" Clevis 45 2-2742 BEARING, Flange 46 4-1236 ASSEMBLY, Clutch Brake Arm 47 4-1244 LATCH, Park Brake 48 9-0975 NUT, 1/2-13 Hex Center Lock 49 9-1594 PIN, 1/16 x 1 27/64 Cotter (Self-Locking) 49 9-1514 WASHER, 3/8 Flat 50 9-1587 WASHER, 1/2 Flat 51 1-4341 RING, 1/2" External Retaining (2)					5 0404	
40       9-0619       NUT, 1/2-13 Hex Flange Lock (2)       82       1-4871       FITTING, Lube         41       9-0118       WASHER, 3/8 Split Lock (2)       83       1-5992       WASHER, 5/8 Flat (2)         42       2-4286       LINK, Shift Lever       84       2-3645       PIN, 3/16 x 1 1/2" Clevis         43       9-1585       NUT, 3/8-16 Hex Center Lock (3)       85       2-2742       BEARING, Flange         44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener				81	5-2431	
41       9-0118       WASHER, 3/8 Split Lock (2)       83       1-5992       WASHER, 5/8 Flat (2)         42       2-4286       LINK, Shift Lever       84       2-3645       PIN, 3/16 x 1 1/2" Clevis         43       9-1585       NUT, 3/8-16 Hex Center Lock (3)       85       2-2742       BEARING, Flange         44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						
42       2-4286       LINK, Shift Lever       84       2-3645       PIN, 3/16 x 1 1/2" Clevis         43       9-1585       NUT, 3/8-16 Hex Center Lock (3)       85       2-2742       BEARING, Flange         44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						
43       9-1585       NUT, 3/8-16 Hex Center Lock (3)       85       2-2742       BEARING, Flange         44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						• • • • • • • • • • • • • • • • • • • •
44       2-5041       LINK, Shift Lever (Twisted)       86       4-1236       ASSEMBLY, Clutch Brake Arm         45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener			,			
45       9-1497       SCREW, 3/8-16 x 1 1/2" H. H. C.       87       4-1244       LATCH, Park Brake         46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						
46       9-0361       SCREW, 5/16-18 x 5/8" Self-Tap (3)       88       9-0975       NUT, 1/2-13 Hex Center Lock         47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						
47       9-0803       BOLT, 1/4-20 x 5/8" Carriage (6)       89       9-1594       PIN, 1/16 x 1 27/64 Cotter (Self-Locking)         48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						
48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       Locking)         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener						NUT, 1/2-13 Hex Center Lock
48       9-1240       SCREW, #10-32 x 5/8" H. W. H. (2)       Locking)         49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener				89	9-1594	PIN, 1/16 x 1 27/64 Cotter (Self-
49       1-1016       BEARING, Nylon (2)       90       9-1514       WASHER, 3/8 Flat         50       9-1587       WASHER, 1/2 Flat       91       9-1296       WASHER, 11/32" Flat Grade 5         51       1-4341       RING, 1/2" External Retaining (2)       92       4-6778       WASHER, Pivot- Stiffener		9-1240	SCREW, #10-32 x 5/8" H. W. H. (2)	1		
50 9-1587 WASHER, 1/2 Flat 91 9-1296 WASHER, 11/32" Flat Grade 5 51 1-4341 RING, 1/2" External Retaining (2) 92 4-6778 WASHER, Pivot- Stiffener	49	1-1016		90	9-1514	WASHER, 3/8 Flat
51 1-4341 RING, 1/2" External Retaining (2) 92 4-6778 WASHER, Pivot- Stiffener	50	9-1587		91		
	51	1-4341	RING, 1/2" External Retaining (2)			
				93	2-4604	


#### **BLADE ENGAGEMENT & TRANSMISSION CONTROLS**

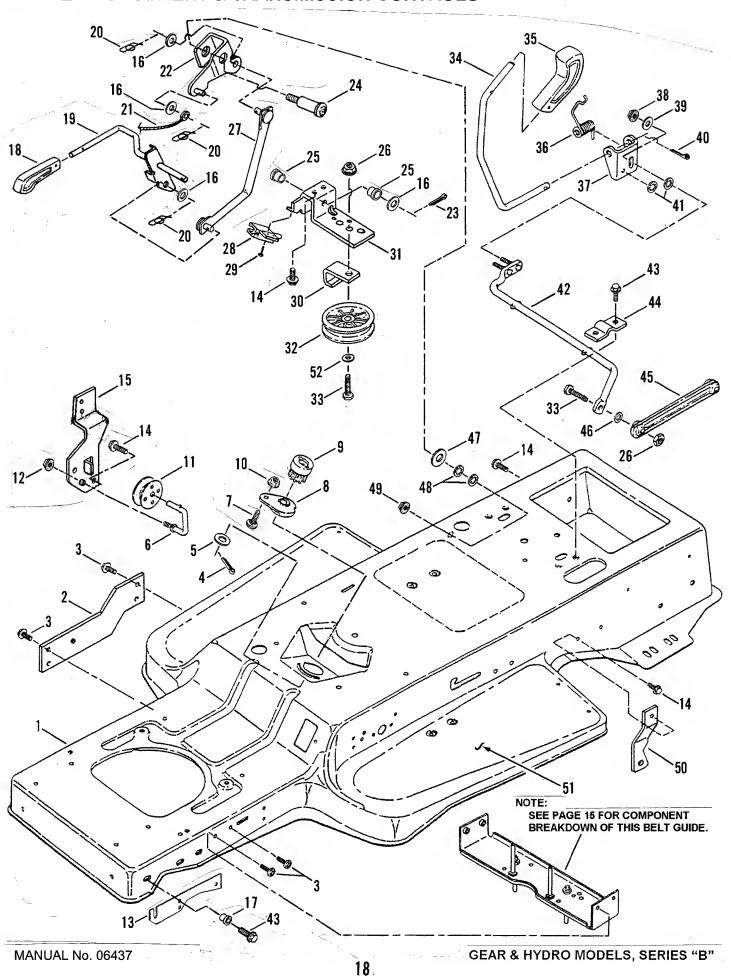


#### **BLADE ENGAGEMENT & TRANSMISSION CONTROLS**

ITEM	PART NO.	DESCRIPTION	ITEM	DART NO	DESCRIPTION
1	3-3301	FRAME, Tractor		PART NO. 9-0913	
2	3-4842				SCREW, #10-24 x 1/2" Self-Tapp. (2) GUIDE, Belt
3	9-1001	SCREW, 5/16-18 x 5/8" Truss	31	3-4332	SUPPORT, PTO Lever
Ū	3 1001	Head (Torx) (13)	32	2-4344	PULLEY
4	9-1598	PIN, 1/8 x 3/4" Cotter	33	2-4344 9-1497	
5	1-4296	WASHER, 1/2 Shim (2)	34		SCREW, 3/8-16 x 1 1/2" Hex Hd. Cap
6	2-9600	ROD, Spool Pivot	35	2-3957 2-3656	LEVER, Shift
7	9-1584	NUT, 1/4-20 Hex Flange Lock	36	2-3050	KNOB, Deck Lift Lever
8	5-2562	ASSEMBLY, Steering Adjuster	37		SPRING, Shift Lever
9	2-2368	GEAR, Steering Pinion	38	3-3541 7-6978	BRACKET, Shift Lever (Upper)
10	9-1573	BOLT, 1/4-20 x 5/8" Short Neck	39		NUT, 1/4-20 Hex Flange Lock
10	9-10/0	Carriage	40	9-0055	WASHER, 1/4 Flat
11	2-3182	SPOOL		9-0364	PIN, 5/32 x 1" Cotter
12	9-0585	NUT, 5/16-18 Hex Flange Lock	41	9-1023	WASHER, 1/4 Internal Tooth Lock (2)
13	3-3488		42	5-2920	ASSEMBLY, Shift Lever (Lower)
14	9-0361	BRACKET, Hood Pivot	43	9-1151	SCREW, 5/16-18 x 1 1/4" Self-Tap. (4)
15	3-4439	SCREW, 5/16-18 x 5/8" Self-Tap. (4)	44	3-3554	CLIP (2)
16	9-0122	BRACKET, Axle/Spool	. 45	2-4286	LINK, Shift Lever
		WASHER, 3/8 Flat (3)	46	2-4180	SPACER
17	2-4616	BUSHING, Flange (2)	47	3-1036	WASHER, Thrust
18	2-3657	KNOB, Deck Engagement	48	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
19	4-1619	WELDMENT, PTO Lever	49	9-0619	NUT, 1/2-13 Hex Flange Lock
20	2-4159	PIN, 3/64 x 1 7/32" (Self-Locking) (3)	50	3-3951	BRACKET, Torque (Gr. Dr. Mdls. Only!)
21	2-8366	CABLE, Blade (Models: LT120G30BB,	51	2-4455	PAD, Foot Sandpaper (Models:
	0.0450	LT125G33BB, ELT125G33BB,			LT120G30BB, LT125G33BB,
	2-9152	CABLE, Blade (Mods: ELT140H33BBV,			& ELT125G33BB)
	0.0007	& LT140H33BBV)		2-8203	PAD, Foot, Rubber Deluxe (Models:
	2-8367	CABLE, Blade (Models: LT140H38BBV			LT140H33BBV, ELT140H33BBV,
		& LT150H38BBV)			LT140H38BBV, LT150H38BBV,
	2-8368	CABLE, Blade (Model: LT155H42BBV)			& LT155H42BBV)
22	4-1238	WELDMENT, PTO Bellcrank	52	9-1514	WASHER, 3/8 Flat
23	9-0037	PIN, 3/32 x 3/4" Cotter			
24	2-4518	BOLT, 1/2-13 x 2 11/32" Shoulder		DECALS	NOT SHOWN
25	1-3321	BUSHING (2)			Loose in Bag)
26	9-1585	NUT, 3/8-16 Hex Center Lock			40, P/N 2-2841
27	4-1237	ROD, PTO Link	1.0	1	08, P/N 2-3009
28	2-3355	SWITCH			50, P/N 2-6251
					52, P/N 2-6253
				I.	· •
				L P/N 2-02	54, P/N 2-6255
-					

TOP VIEW OF BELT GUIDE BRACKET, Part No. 3-5963 (see page 15)
(Cutting Deck, Drive and Year of Manufacture Designations
Imprinted in Bracket as shown)

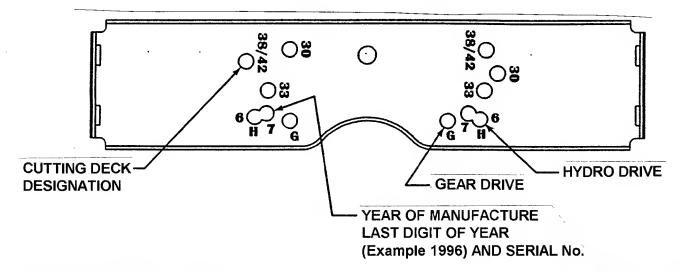

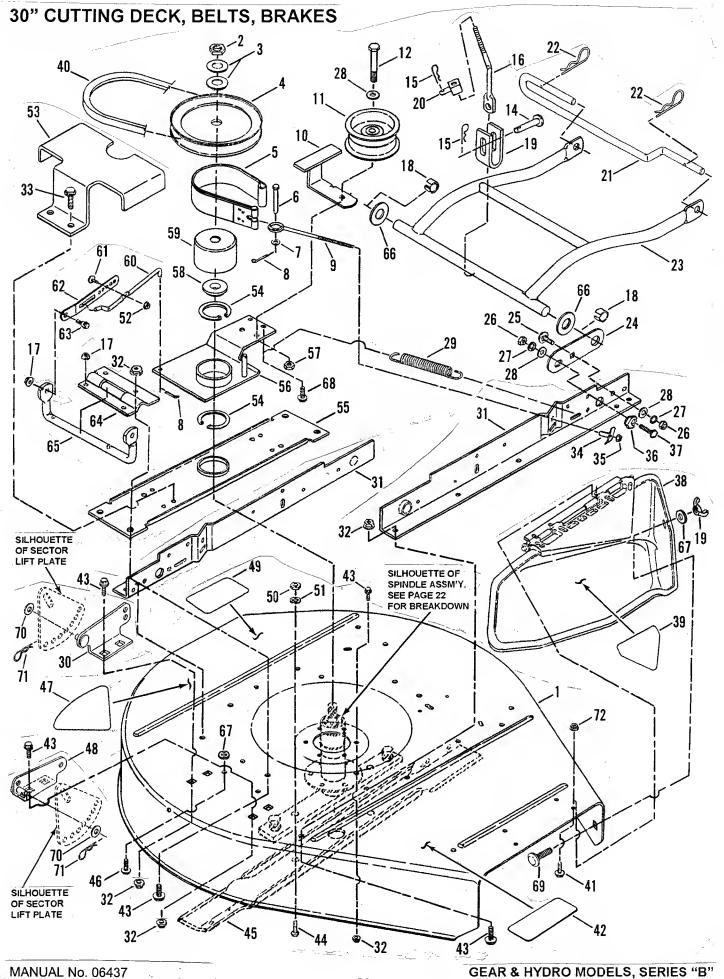


ITEM		DESCRIPTION			DESCRIPTION
1	5-3689	DECK, 30" Cutting (Includes items	39	1-3010	DECAL - DANGER (Cut Finger)
		42 & 49)	40	2-2786	BELT, Drive, 30" Cutting Deck
2	1-0027	NUT, 3/4-16 Hex Jam	41	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange
3	3-2027	WASHER, Flat (2)			Lock (2)
4	2-2715	PULLEY, Spindle, 6 1/2" O.D.	42	1-4852	DECAL - CAUTION
5	5-2886	ASSEMBLY, Brake Band	43	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange
6	1-4304	PIN, 1/4 x 1 1/4" Clevis			Lock (17)
7	9-0055	WASHER, Flat	44	9-0392	SCREW, 1/2-20 x 1" Hx. Hd. Cap (2)
8	9-0037	COTTER-PIN, 3/32 x 3/4" (2)	45	1-8069	BLADE, 30" Cutting Deck
9	2-2879	BOLT, 1/4-20 Eye	46	9-0595	BOLT, 5/16-18 x 3/4" Hx. Flg. Lk. (2)
10	4-1487	GUIDE, Belt	47	2-3997	DECAL, 30"
11	2-7717	PULLEY, Idler, 3 1/4" O.D.	48	4-1252	BRACKET, Rear Deck Lift, Right Side
12	9-1553	SCREW, 3/8-16 x 1 3/4" Hx. Hd. Cap	49	1-6973	DECAL - CAUTION, Rotating Blades
13	3-3938	BRACKET, Front Lift Hanger	50	9-0559	NUT, 1/2-20 Hex Jam (2)
14	1-3460	PIN, 3/8 x 1 1/2" Clevis	51	9-0509	WASHER, 1/2 Internal Tooth
15	9-1503	PIN, Hair, 3/32 x 1 19/32" (2)			Lock (2)
16	2-6639	ROD, Front Lift	52	9-0583	NUT, 1/4-20 Hex Flange Lock (2)
17	9-0585	NUT, 5/16-18 Hex Flange Lock (2)	53	3-3918	GUIDE, Belt
18	1-2067	RING, Front Lift Arm (2)	54	1-0740	RING, Retaining (2)
19	9-0492	NUT, 5/16-18 Wing	55	3-8018	BRACE, Spindle
20	2-9694	SWIVEL, Brake	56	4-1311	ARM, Idler
21	2-7471	PIN, Front Deck Hanger	57	9 <b>-15</b> 85	NUT, 3/8-16 Hex Center Lock
22	9-1596	PIN, .148 x 2.62" Hair (2)	58	1-4407	WASHER, Spindle
23	4-1141	LIFT, Front Arm	59	3-2169	DRUM, Brake
24	3-2432	LINK, Adjustment	60	2-4192	ROD, Link, Clutch/Brake
25	9-0850	BOLT, 3/8-16 x 3/4" Carriage	61	9-0584	BOLT, 1/4-20 x 1/2" Hex Flg. Lock
26	9-0130	NUT, 3/8-16 Hex (2)	62	3-3586	BRACKET, Link, Clutch/Brake
27	9-0118	WASHER, 3/8 Split Lock (2)	63	1-5761	SCREW, 5/16-18 x 3/4" Shoulder
28	9-0122	WASHER, Flat, 3/8 SAE (3)	64	3-3578	BRACKET, Pivot Arm
29	1-2264	SPRING, Clutch & Brake	65	2-4183	ARM, Pivot
30	4-1258	BRACKET, Rear Deck Lift,	66	3-2027	WASHER, Flat (2)
		Left Side	67	9-0188	WASHER, 5/16 Flat (3)
31	3-3499	RAIL, 30" Cutting Deck (2)	68	9-0368	SCREW, 5/16-18 x 3/4" Self-Tapping
32	9-0613	NUT, 3/8-16 Hex Flange Lock (17)	69	9-1508	BOLT, 5/16-18 x 3/4" Short Neck
33	9-0361	SCREW, 5/16-18 x 5/8" S.T. (2)		•	Carriage
34	1-4303	T-NUT, 1/4-20 Thread	70	9-1514	WASHER, Flat, .41 I.D. x .81 O.D. (2)
35	9-0063	NUT, 1/4-20 Hex	71	9-1503	PIN, .093 x 1.50" Hair (2)
36	1-5012	ECCENTRIC, Leveling	72	9-1601	NUT, 5/16-18 Hex Flange Lock
37	9-0563	SCREW, 3/8-16 x 1" Hex Hd. Cap			<del>-</del>
38	5-2553	ASSEMBLY, Deflector (Includes			
		item 39)			

NOTE: 30" CUTTING DECK USED ON MODEL LT120G30BB ONLY! FOR ORDERING COMPLETE CUTTER UNIT ASSEMBLY, ORDER KIT No. 6-1415.


AIR LIFT KIT P.N. 6-0735 AVAILABLE FOR 30" CUTTING DECK INCLUDES: (2 ea.) P.N. 3-1724 AIR LIFTS (6 ea.) P.N. 9-0228 SCREWS (6 ea.) P.N. 9-0391 WASHERS (6 ea.) P.N. 9-0223 NUTS (NOT SHOWN)

#### SPINDLE - 30" CUTTING DECK

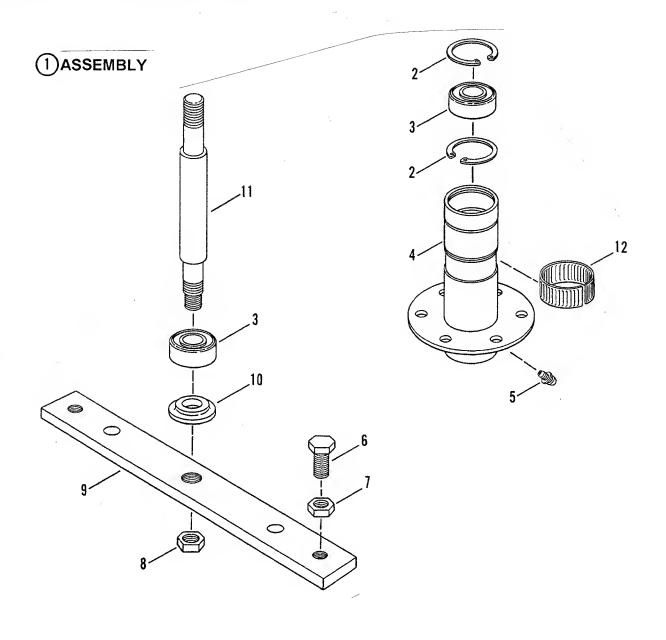


ITEM	PART NO.	DESCRIPTION
1	5-2917	ASSEMBLY, Spindle Housing, 30" Cutting Deck
		(Model LT120G30BB) (Includes items 2 thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-2294	HOUSING, Spindle (Includes item 5)
5	1-0817	FITTING, Lube
6	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap, Grade 5 (2)
7	9-0559	NUT, 1/2-20 Hex Jam (2)
8	9-0356	NUT, 5/8-18 Hex Lock
9	3-7751	HOLDER, Blade
10	1-4407	WASHER, Spindle
11	2-4687	SPINDLE
12	1-2670	RING, Tolerance


#### **ELECTRICAL COMPONENTS**

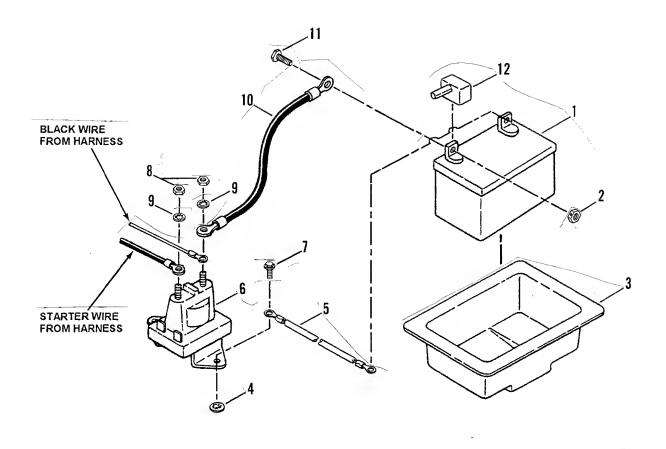

ITEM	PART NO.	DESCRIPTION
1	6-0618	KIT, Battery (Includes Decal P.N. 1-6134 &
		Battery Without Acid)
2	9-0372	NUT, 1/4-20 Hex Center Lock (2)
3	1-7853	TRAY, Battery
4	1-2485	RETAINER, Screw
5	2-6414	CABLE, Ground (Black)
6	1-8604	SOLENOID
7	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (2)
8	9-0977	NUT, 1/4-20 Hex Jam (2)
9	9-1314	WASHER, 1/4 Internal Tooth Lock (2)
10	1-4476	CABLE, Positive (Red)
11	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
12	1-2444	COVER, Positive Terminal

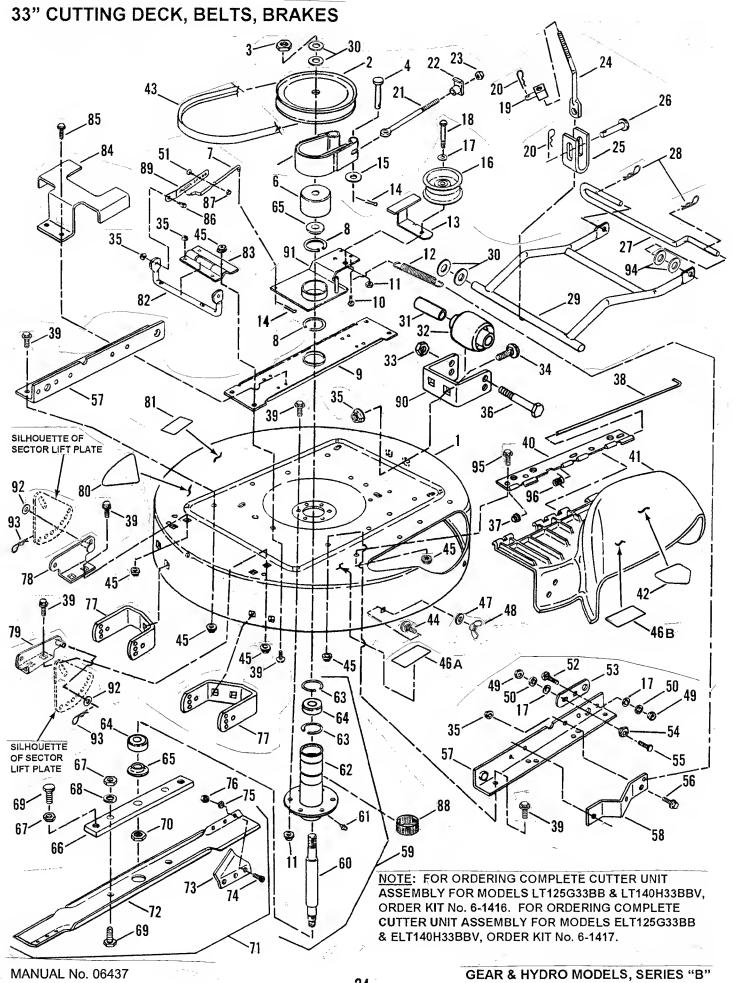


			*		NO DECK, DELIO, DIVARLO
		D. DESCRIPTION			D.DESCRIPTION
1A	5-3690	ASSEMBLY, Deck, 33" Cutting	48	9-0492	NUT, 5/16-18 Wing
		(Includes items 46A & 81)	_	9-1511	NUT, 5/16-18 Hex, Grade 5 (Euro
		(Mdls. LT125G33BB & LT140H33BBV)	~.		Models Only!)
1B	5-3693	ASSEMBLY, Deck, 33" Cutting	49	9-0130	NUT, 3/8-16 Hex (2)
		(Includes items 46B & 81) (Models:	50	9-0118	WASHER, 3/8 Split Lock (2)
		ELT125G33BB & ELT140H33BBV)	51	9-0584	BOLT, 1/4-20 x 1/2" Hex Flange Lock
2	2-6558	PULLEY, Spindle, 7" O.D.	.52	9-0850	BOLT, 3/8-16 x 3/4" Carriage
3	1-0027	NUT, 3/4-16 Hex Jam	53	3-2432	
					LINK, Adjustment
4	1-4304	PIN, 1/4 x 1 1/4" Clevis	54	1-5012	ECCENTRIC, Leveling
5	5-2886	ASSEMBLY, Brake Band	55	9-0563	SCREW, 3/8-16 X 1" Hex Head Cap
6	3-2169	DRUM, Brake	_ 56	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange
7	2-4192	ROD, Link, Clutch/Brake	ĺ		Lock (4)
8	1-0740	RING, Retaining (2)	57	3-8453	RAIL, Side (2)
9	3-8018	BRACE, Spindle	58	3-3952	ANCHOR, Brake
10	9-0368	SCREW, 5/16-18 x 3/4" Self-Tapping	59	5-2917	ASSEMBLY, Spindle (Includes
11	9-1585	NUT, 3/8-16 Hex Center Lock			items 60 thru 70)
12	1-2264	SPRING, Clutch & Brake	60	2-4687	SPINDLE
13	4-1487	GUIDE, Belt	61	1-0817	FITTING, Lube
14	9-0037	COTTER-PIN, 3/32 x 3/4" (2)	62	5-2294	
					HOUSING, Spindle (Incl. item 61)
15	9-0055	WASHER, Flat	63	1-2491	RING, Retaining (2)
16	2-7717	PULLEY, Idler, 4" O.D.	64	1-3313	BEARING, Spindle (2)
17	9-0122	WASHER, 3/8 SAE Flat (3)	65	1-4407	WASHER, Spindle (2)
18	9-1553	SCREW, 3/8-16 x 1 3/4" Hx. Hd. Cap $_{\odot}$	66	3-7751	HOLDER, Blade
19	2-9694	SWIVEL, Brake	67	9-0559	NUT, 1/2-20 Hex Jam (4) (2 in
20	1-2431	PIN, 1/4 x 1 1/8" Hair (2)			assembly)
21	2-6677	BOLT, 1/4-20 Eye	68	9-0509	WASHER, 1/2 Int. Tooth Lock (2)
22	1-4303	NUT, 1/4-20 Tee	69	9-0392	SCREW, 1/2-20 Hex Head
23	9-0063	NUT, 1/4-20 Hex		0 0002	Cap (4) (2 in assembly)
24	2-6639	ROD, Front Lift	∂ 70	9-0356	NUT, 5/8-18 Hex Lock
		·			·
25	3-3938	BRACKET, Front Lift Hanger	71	5-7482	ASSEMBLY, Blade & Air Lift
26	1-3460	PIN, 3/8 x 1 1/2" Clevis			(Includes items 72 thru 76)
27	2-7471	PIN, Front Deck Hanger	72	1-9523	BLADE, 33" Cutting Deck
28	9-1596	PIN, Hair, .148 x 2.62" (2)	73	3-7723	AIR-LIFT (2)
29	4-1495	LIFT, Front Arm	-	3-4468	AIR-LIFT (2) (Euro Models Only!)
30	3-2028	WASHER, Flat (4)	74	9-0228	SCREW, 5/16-24 x 11/16"
31	1-5272	SPACER (3)			Machine (6)
32	1-9190	WHEEL, Gage (3)	75	9-0391	WASHER, 5/16 Int. Tooth Lock (6)
33	9-1600	NUT, 3/8-24 Hex Center Lock (3)	76	9-0223	NUT, 5/16-24 Hex (6)
34	9-0004	BOLT, 5/16-18 x 1/2" Short Neck	77	3-3571	BRACKET, Gage Wheel (Rear) (2)
0-1	0 0004	Carriage (6)	78	4-1258	BRACKET, Rear Deck Lift, Left Side
35	9-0585	NUT, 5/16-18 Hex Flange Lock (9)	79	4-1252	BRACKET, Rear Deck Lift, Right Side
36	9-1532	SCREW, 3/8-24 x 3 3/4" Hex Head	80	2-2991	DECAL, 33" Hi-Vac
		Cap, Grade 5 (3)	81	1-6973	DECAL - CAUTION (Rotating Blades)
-	5-2555	ASSEMBLY, Deflector (Includes	82	2-4183	ARM, Pivot
		items 37, 38, 40, 41, 42, & 96)	83	3-3578	BRACKET, Pivot Arm
37	2-6483	PAL-NUT, 1/4 Hex	84	3-3926	GUIDE, Belt
38	2-6234	PIN, Hinge	85	9-0361	SCREW, 5/16-18 x 5/8" Self-Tap. (2)
39	9-0612	BOLT, 3/8-16 x 3/4" Hx. Flge. Lk. (15)	- 86	1-5761	SCREW, 5/16-18 x 3/4" Shoulder
40	3-3780	HINGE, Deflector	87	9-0583	NUT, 1/4-20 Hex Flange Lock
41	2-6233	DEFLECTOR, Discharge	88	1-2670	RING, Tolerance
42	2-6831	DECAL, Danger (Cut Finger)	89	3-3586	BRACKET, Link, Clutch/Brake
43					
	2-6546	BELT, Drive, 33" Cutting Deck	90	3-3570	BRACKET, Gage Wheel (Front)
44	9-1508	BOLT, 5/16-18 x 3/4" Short Neck	91	4-1311	ARM, Idler
		Carriage, Grade 5	92	9-1514	WASHER, FI., .406 I.D. x .812 O.D. (2)
45	9-0613	NUT, 3/8-16 Hex Flange Lock (18)	93	9-1503	PIN, Hair, .093 x 1.50" (2)
46A	1-4852	DECAL - CAUTION, Deflector (Models)	94	9-1587	WASHER, Flat (2)
		LT125G33BB & LT140H33BBV)	95	9-1588	BOLT, 3/8-16 x 3/4" Hex Flange Lock,
46B	2-2841	DECAL - CAUTION, Deflector (Models			Grade 5 (3)
		ELT125G33BB & ELT140H33BBV)	96	1-6341	SPRING, Hinge
47	9-1296	WASHER, 5/16 Flat (2)			, ,
	3 .200	(2)			

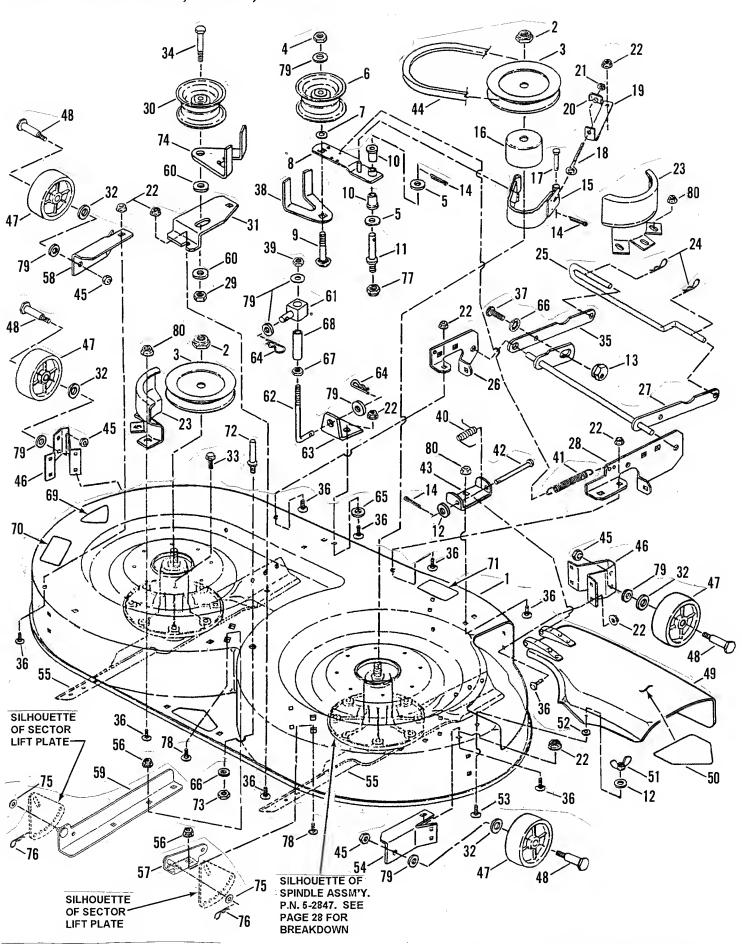


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-3691	ASSEMBLY, Deck, 38" Cutting	42	2-6161	PIN, 5/16 x 3 3/16" Clevis
		(Includes items 70 & 71)	43	2-6750	HINGE, Chute Deflector
2	9-1006	NUT, 5/8-16 Hex Nyloc (2)	44	2-5042	BELT, Drive, 38" Cutting Deck
3	2-7792	PULLEY, Spindle (2)	45	9-0289	NUT, 3/8-24 Hex Lock (4)
4	7-6979	NUT, 3/8-16 Hex Nyloc (2)	46	3-3756	BRACKET, Gage Wheel, Front (2)
5	9-0122	WASHER, 3/8 Flat (2)	47	2-6122	WHEEL, Gage (4)
6	2-4725	PULLEY, Idler	48	9-1526	BOLT, 3/8-24 Shoulder (4)
7	1-3847	RETAINER, 3/8 Bolt	49	5-3226	ASSEMBLY, Chute Deflector
8	4-1392	ARM, Idler Pulley			(Includes 1 each item 12 & 14, &
9	9-0738	BOLT, 3/8-16 x 2 3/4" Short			items 40, 42, 43, & 50)
		Neck Carriage, Grade 5	- 50	2-6831	DECAL, Danger
10	1-2306	BUSHING, Flange (2)	51	9-0492	NUT, 5/16-18 Wing
11	2-6618	STUD, Idler	52	1-1791	RETAINER, 5/16 Bolt
12	9-1296	WASHER, Flat (2)	53	9-1508	BOLT, 5/16-18 x 3/4" Short Neck
13	1-5447	ECCENTRIC, Leveling		0 1000	Carriage, Grade 5
14	9-1597	COTTER-PIN, 3/32 x 3/4" (3)	54	3-3890	BRACKET, Wheel (Right Side)
15	5-2886	ASSEMBLY, Brake Band	55	2-4466	BLADE, 38" Cutting Deck (2)
16	3-3816	DRUM, Brake	56	9-0613	NUT, 3/8-16 Hex Flange Lock (4)
17	1-4304	PIN, 1/4 x 1 5/8" Clevis	57	4-1259	BRACKET, Rear Deck Lift (Right
18	1-4302	BOLT, 1/4-20 Eye		, ,	Side)
19	3-3825	ANCHOR, Blade Brake	58	3-3891	BRACKET, Wheel (Left Side)
20	2-4908	NUT, 1/4-20 "T" Lock	59	4-1257	BRACKET, Rear Deck Lift (Left
21	9-0063	NUT, 1/4-20 Hex			Side)
22	9-0585	NUT, 5/16-18 Hex Flange	60	9-1152	WASHER, .406 I.D. x 1.50 O.D.
		Lock (24)		•	x .20 (2)
23	2-4801	GUARD, Belt (2)	61	2-6648	SWIVEL, Lift
24	9-1596	PIN, Hair (2)	62	2-9718	BOLT, "J"
25	2-7471	PIN, Deck Hanger	63	2-6634	BRACKET, Angle (Front)
26	2-6757	BRACKET, Front Lift Arm	64	9-1310	PIN, Hair (2)
		(Left Side)	65	9-0500	WASHER, 7/16 Flat
27	4-1371	LIFT, Front Arm	66	9-0390	WASHER, 3/8 Internal Tooth Lk.
28	2-8365	BRACKET, Front Lift Arm	67	9-1302	NUT, 3/8-16 Hex, Grade 5
		(Right Side)	68	2-6649	SPACER, Lift
29	9-1325	NUT, 1/2-13 Hex Nyloc	69	2-6154	DECAL, 38"
30	2-6310	PULLEY, Idler	70	1-6973	DECAL - CAUTION (Rotating
31	3-3728	BRACKET, Idler			Blades)
32	9-1587	WASHER, 1/2 Flat (4)	71	1-4852	DECAL - CAUTION
33	9-0815	SCREW, 3/8-16 x 3/4" Self-	72	1-4583	STOP, Deck
		Tapping (10)	73	9-0155	NUT, 3/8-24 Hex
34	9-1558	BOLT, 1/2-13 x 3 1/2" Hx. Hd. Cap	74	3-4045	GUIDE, Belt
35	3-3751	ARM, Front Lift	75	9-1514	WASHER, Flat, .406 I.D.
36	9-0799	BOLT, 5/16-18 x 5/8" Short Neck			x .812 O.D. (2)
		Carriage (29)	76	9-1503	PIN, Hair, .093 x 1.50" (2)
37	9-0163	SCREW, 3/8-24 x 1 1/4" Hex Head	77	1-1201	NUT, 5/16-24 Hex Lock
		Cap, Grade 2	78	9-0850	BOLT, 3/8-16 x 3/4" Carriage
38	3-3929	GUIDE, Belt	79	9-1514	WASHER, Flat
39	9-1585	NUT, 3/8-16 Hex Center Lock	80	9-1601	NUT, 5/16-18 Hex Lock, Gr. 5 (7)
40	2-6158	SPRING, Chute Deflector Hinge			
41	2-6173	SPRING, Blade Brake			

NOTE: 38" CUTTING DECK USED ON MODELS LT140H38BBV & LT150H38BBV ONLY! FOR ORDERING COMPLETE CUTTER UNIT ASSEMBLY, ORDER KIT No. 6-1418.

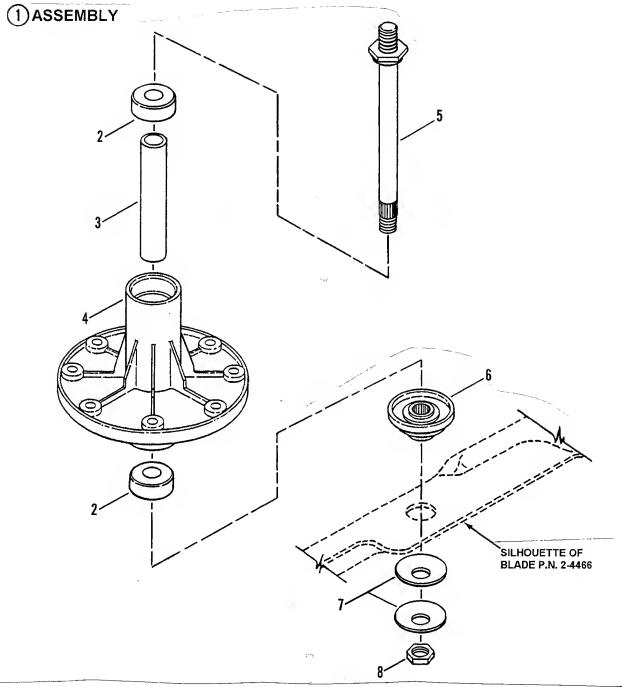


ITEM	PART NO.	DESCRIPTION
1	5-2847	ASSEMBLY, Spindle Housing, 38" Cutting Deck (Models LT140H38BBV &
		LT150H38BBV) (Includes items 2 thru 8)
2	2-6808	BEARING, Spindle (2)
3	2-4465	SPACER, Spindle Housing
4	2-4461	HOUSING, Spindle
5	2-6754	SPINDLE
6	2-4463	SPACER, Blade
7	2-4467	WASHER, Belleville, 19/32" I.D. x 1 3/4" O.D. (2)
8	9-1633	NUT, 9/16-18 Hex Jam

#### **IMPLEMENT LIFT PARTS**

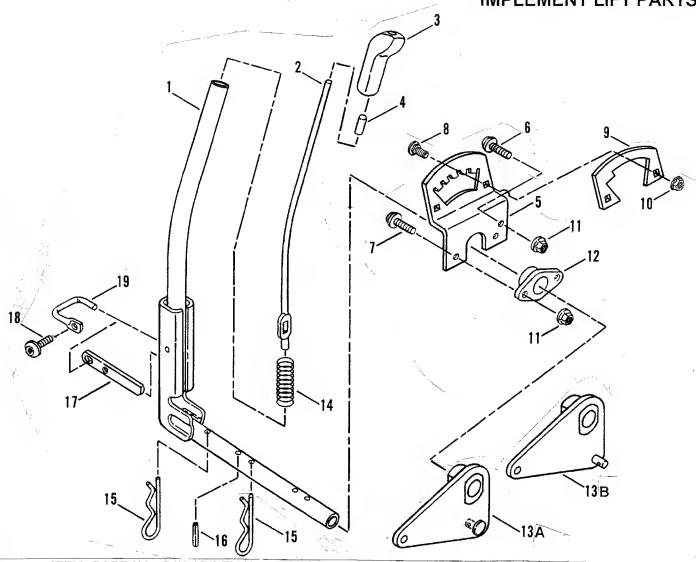

	• • • •	
ITEM	PART NO.	DESCRIPTION
1	4-1015	LEVER, Implement Lift (Models: LT120G30BB, LT140H38BBV, & LT150H38BBV)
*****	4-1655	LEVER, Implement Lift (Models: LT125G33BB, ELT125G33BB, LT140H33BBV,
		ELT140H33BBV, & LT155H42BBV)
2	2-2565	ROD, Lift Lever
3	1-9363	KNOB, Lift Lever
4	1-4361	CAP, Lift Lever Rod
5	3-3449	QUADRANT, Lift Lever
6 7	9-1001	SCREW, 5/16-18 x 5/8" Truss Head (Torx)
	9-1000	SCREW, 5/16-18 x 7/8" Truss Head (Torx) (2)
8	9-0005	BOLT, 1/4-20 x 1/2" Short Neck Carriage (2)
9	3-4559	DETENT, Highcut Lockout (Euro Models Only!)
10	9-0583	NUT, 1/4-20 Hex Flange Lock (2)
11	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
12	2-2567	PIVOT, Lift Lever
13A	4-1254	BELLCRANK, Lift Lever (Models: LT125G33BB,
		ELT125G33BB, ELT140H33BBV, & LT140H33BBV)
13B	4-1255	BELLCRANK, Lift Lever (Models: LT120G30BB,
		LT140H38BBV, LT150H38BBV, & LT155H42BBV)
14	2-25 <b>6</b> 6	SPRING
15	1-3844	PIN, Hair, 5/32 x 2 5/8" (2)
16	2-2895	PIN, Dowel, 1/4 x 1 1/8"
17	2-2568	DETENT, Latch
18	9-0999	SCREW, 1/4-20 x 5/8" Truss Head (Torx)
19	2-4742	LATCH, Pivot

42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)

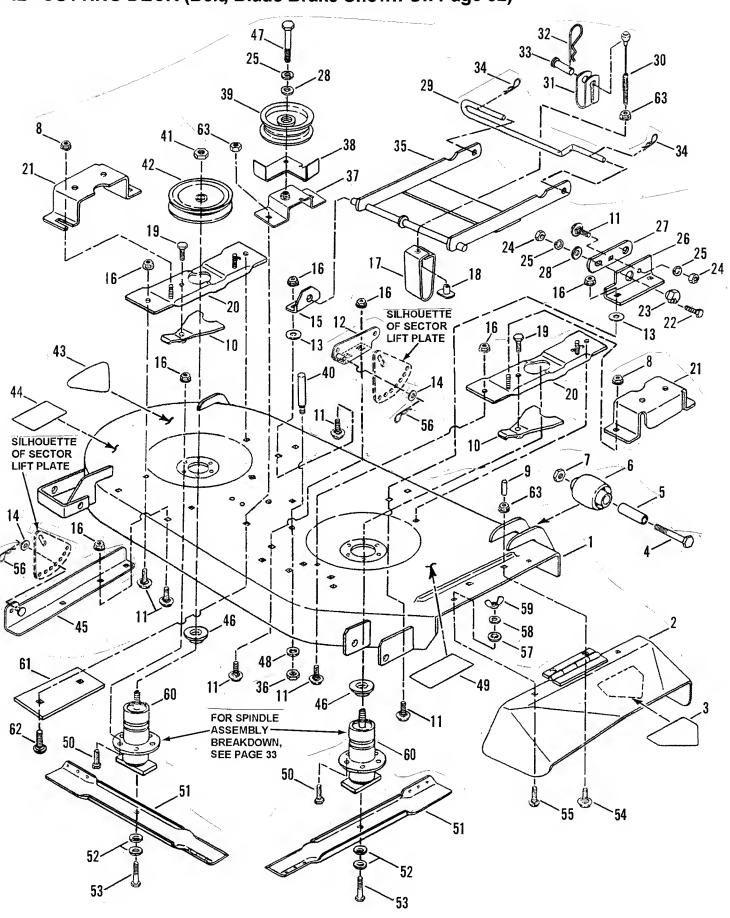


#### 42" CUTTING DECK (Belt, Blade Brake Shown On Page 32)

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-3692	ASSEMBLY, Deck, 42" Cutting	36	9-0155	NUT, 3/8-24 Hex
		(Includes items 44 & 49)	37	5-3567	BRACKET, Idler
2	5-1401	DEFLECTOR, Side Discharge	38	3-4041	GUIDE, Belt
4		(Includes item 3)	39	1-8574	PULLEY, Idler
3	1-3010	DECAL - DANGER	40	1-4583	STUD, Idler
4	9-1532	SCREW, 3/8-24 x 3 3/4" Hex	41	1-0027	NUT, 3/4-16 Hex Jam (2)
		Head Cap (4)	42	2-4863	PULLEY, Spindle (2)
5	1-5272	SPACER (4)	43	2-4910	DECAL, 42" Deck
6	1-9190	WHEEL, Gage (4)	44	1-6973	DECAL - CAUTION (Rotating
7	9-1600	NUT, 3/8-24 Hex Center Lock,	1		Blades)
		Grade 5 (4)	45	4-1253	BRACKET, Deck Lift (Left Side)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (10)	46	1-4407	WASHER, Spindle (2)
9	2-3606	CAP, Vinyl (2)	47	9-0167	BOLT, 3/8-24 x 2" Hex Head Cap,
10	5-1747	ASSEMBLY, Spindle Lock (2)		T.	Grade 5
11	9-0850	BOLT, 3/8-16 x 3/4" Carriage (10)	48	9-0390	WASHER, 3/8 Internal Tooth Lock
12	4-1252	BRACKET, Lift (Right Side)	49	1-4852	DECAL - CAUTION (Deflector in
13	9-0600	WASHER, Flat (4)			Place)
14	9-1514	WASHER, Flat, .406 I.D. x .812 O.D. (2)		9-0612	BOLT, 3/8-16 x 3/4" Hex Flange
15	3-2297	BRACKET, Front Hanger (Left Side)	51	2-6691	BLADE, 21" Cutter (2)
16	9-0613	NUT, 3/8-16 Hex Flange Lock (15)	52	1-2063	WASHER, Cone, 13/32 x 1 13/32"
17	3-8043	BRACKET, Front Lift Arm Hanger			Diameter (4)
18	9-1567	T-NUT, 5/16-18	53	9-0824	SCREW, 3/8-24 x 1 1/4" Hex Head
19	9-0582	BOLT, 3/8-16 x 1" Hex Flange Lock (2)			Cap, Grade 5 (2)
20	5-2487	ASSEMBLY, Spindle Brace (2)	54	9-1303	BOLT, 5/16-18 x 1" Short Neck
21	3-4409	GUARD, Pulley (2)			Carriage, Grade 5 (2)
22	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap	55	9-0799	BOLT, 5/16-18 x 5/8" Carriage (2)
23	1-5012	ECCENTRIC, Leveling	56	9-1503	PIN, Hair, .093 x 1.50" (2)
24	9-0130	NUT, 3/8-16 Hex (2)	57	1-1791	RETAINER, 5/16 Bolt (2)
25	9-0118	WASHER, 3/8 Split Lock (3)	58	9-1315	WASHER, 5/16 Split Lock (2)
26	3-8382	BRACKET, Front (Right Side)	59	9-1537	WING-NUT, 5/16-18 (2)
27	3-2432	LINK, Adjustment	60	5-9723	ASSEMBLY, Spindle (2)
28	9-0122	WASHER, 3/8 Flat (2)	61	3-4202	PLATE, Support
29	2-7471	PIN, Deck Hanger	62	9-0636	SCREW, 5/16-18 x 1" Hex Head
30	2-2893	CABLE, Deck Lift	l		Cap, (2)
31	3-2276	CLEVIS, Lift Cable	63	9-1601	NUT, 5/16-18 Hex Flange Lock
32	9-1503	PIN, Hair, 3/32 x 1 1/2"			Grade 5 (3)
33	2-9687	PIN, Clevis, 3/8 x 1 1/16"			
34	9-1596	PIN, Hair, .148 x 2.62" (2)			
35	4-1480	ASSEMBLY, Front Hanger			

NOTE: 42" CUTTING DECK USED ON MODEL LT155H42BBV ONLY! FOR ORDERING COMPLETE CUTTER UNIT ASSEMBLY, ORDER KIT No. 6-1419.

#### **BELT, BLADE BRAKE - 42" CUTTING DECK**

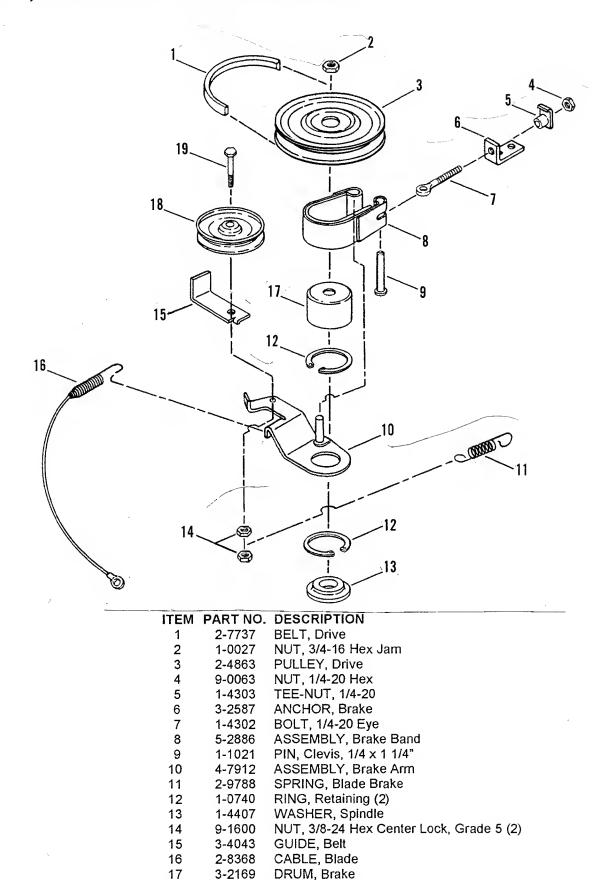

18

19


1-8574

9-0167

SCREW, 3/8-24 x 2" Hex Head Cap


PULLEY, Idler

#### SPINDLE ASSEMBLY - 42" CUTTING DECK

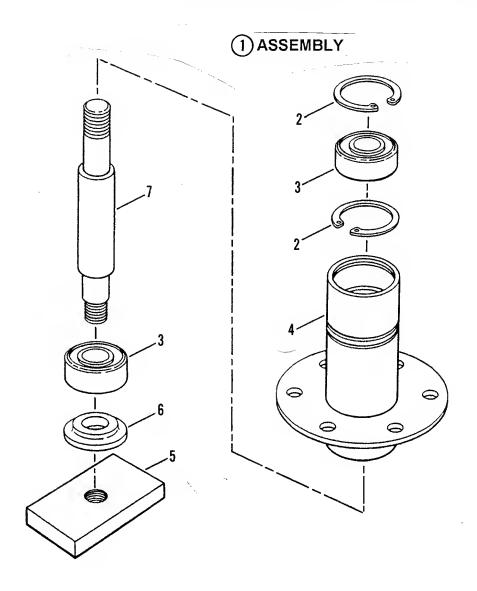

ITEM	PART NO.	DESCRIPTION
1	5-9723	ASSEMBLY, Spindle Housing, 42" Cutting Deck (Model LT155H42BBV)
		(Includes items 2 thru 7)
2	1-2491	RING, Retaining (2)
· 3	1-3313	BEARING, Spindle (2)
4	4- <b>7</b> 917	HOUSING, Spindle
5	3-2294	HOLDER, Blade
6	1-4407	WASHER, Spindle
7	2-7668	SPINDLE

#### **ENGINE COMPONENTS**

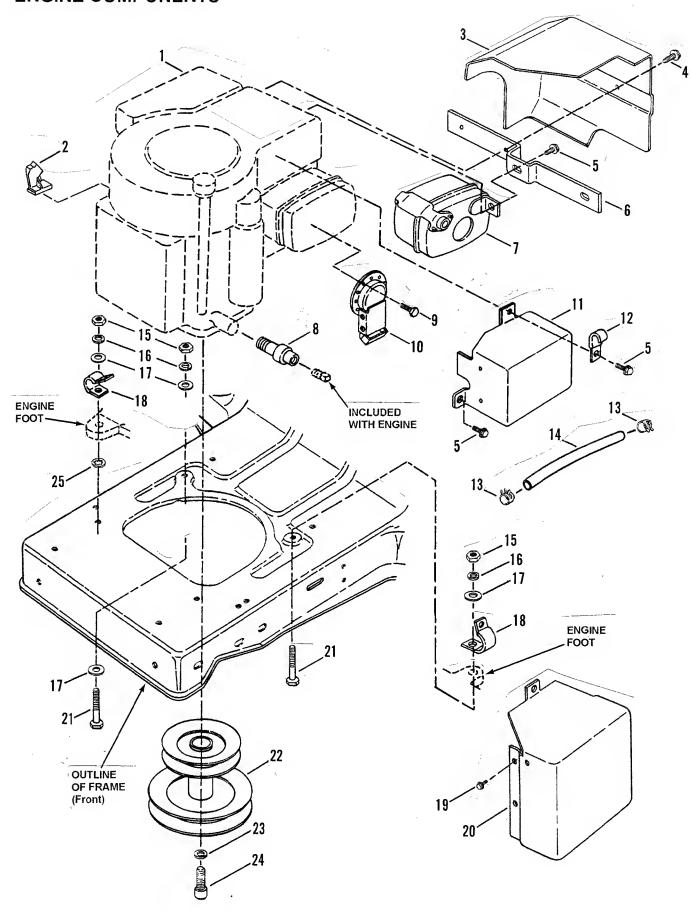


#### **ENGINE COMPONENTS**


ITEM	PART NO.	DESCRIPTION
1	**	ENGINE, B. & S. 12HP, Model 283707, Type 0134 (Model: LT120G30BB)
_	**	ENGINE, B. & S. 12.5HP I/C, 3100 RPM, Model 289707, Type 0117, Trim 01
	;	(Model: LT125G33BB)
_	**	ENGINE, B. & S. 12.5HP I/C, 2900 RPM, Model 289707, Type 0120, Trim 01
		(Model: ELT125G33BB)
-	**	ENGINE, B. & S. 14HP OHV, Model 287707, Type 0229 (Models: LT140H33BBV
		& ELT140H33BBV)
_	**	ENGINE, B. & S. 14HP OHV, Model 287707, Type 0119 (Model: LT140H38BBV)
-	**	ENGINE, B. & S. 15.5HP OHV, Model 28Q777, Type 0155, Trim 02
		(Model: LT150H38BBV)
_	**	ENGINE, B. & S. 15.5HP OHV, Model 28Q777, Type 0155, Trim 01
	,	(Model: LT155H42BBV)
2	2-5079	CLIP, Speed
3	1-7022	HEAT SHIELD (Models: LT120G30BB & LT125G33BB Only!)
4	9-0307	SCREW, #10-24 x 1/2" Hex Washer Head, Self-Tapping (2)
5	9-1579	BOLT, 1/4-20 x 1/2" Hex Flange Lock (3)
6	3-8374	BRACKET, Heat Shield (Gear Drive Models Only!)
7	5-2691	MUFFLER, Exhaust (Gear Drive Models Only!)
8	2-2486	EXTENSION, Oil Drain (Shown) (Gear Drive Models Only!)
_	2-7972	ASSEMBLY, Oil Valve (Not Shown) (Hydro Drive Models Only!)
9	9-1581	SCREW, #8-18 x 1/2" Hex Head, Self-Tapping (3)
10	4-1537	EXTENSION, Muffler (All Hydro Models & Gear Drive Model ELT125G33BB)
11	4-1269	HEAT SHIELD, Muffler (Shown) (Hydro Models Only!)
_	4-1680	HEAT SHIELD, Muffler (Not Shown) (Model: ELT125G33BB Only!)
12	2-6482	CLIP, "J" Type (Hydro Models Only!)
13	1-2222	CLAMP, Fuel Line (2)
14	2-3479	LINE, Fuel, 16" Long (Models: LT140H33BBV, ELT140H33BBV, LT140H38BBV,
		LT150H38BBV, & LT155H42BBV)
-	3-2015	LINE, Fuel, 7" Long (Models: LT120G30BB, LT125G33BB, & ELT125G33BB)
15	9-1511	NUT, 5/16-18 Hex (4)
16	9-1315	WASHER, 5/16 Split Lock (4)
17	9-1296	WASHER, 5/16 Flat (5)
18	1-5861	CLIP, Wiring Harness (2)
19	9-1075	SCREW, #10-24 x 5/8" Hex Washer Head, Self-Tapping (4)
20	4-1677	HEAT SHIELD, Muffler (Shown) (Models: ELT140H33BBV, LT140H33BBV, &
		LT140H38BBV Only!)
_	4-1679	HEAT SHIELD, Muffler (Not Shown) (Models: LT125G33BB & ELT125G33BB)
21	9-0669	SCREW, 5/16-18 x 1 3/4" Hex Head Cap (2)
22	2-7767	ASSEMBLY, Engine Pulley (Models: LT120G30BB, LT125G33BB, & ELT125G33BB)
_	2-8028	ASSEMBLY, Engine Pulley (Models: LT140H33BBV & ELT140H33BBV)
-	2-8033	ASSEMBLY, Engine Pulley (Models: LT140H38BBV, LT150H38BBV, & LT155H42BBV)
23	9-1301	WASHER, 7/16 Split Lock
24	9-1531	SCREW, 7/16-20 x 1" Hex Cap, Socket Head
25	9-0391	WASHER, 5/16 Internal Tooth Lock

\*\* PURCHASE ENGINE & ENGINE PARTS,
OTHER THAN THOSE LISTED, FROM
ENGINE SERVICE OUTLETS.


#### **ELECTRICAL - Brigg's & Stratton Engines**

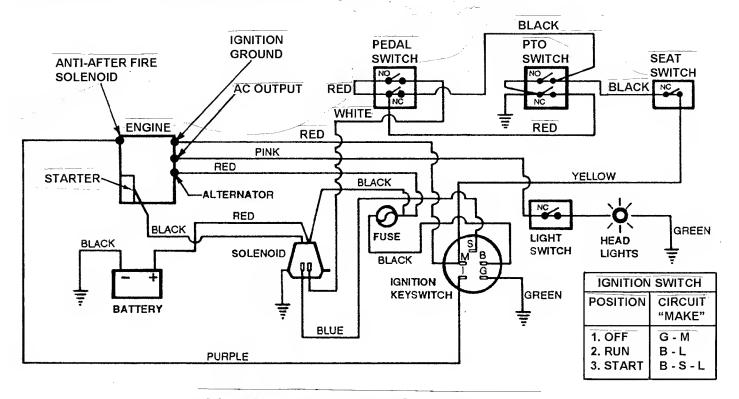



SCHEMATIC - WIRING DIAGRAM P.N. 2-6616
(MODELS: LT140H33BBV, ELT140H33BBV, LT140H38BBV, LT155H42BBV)

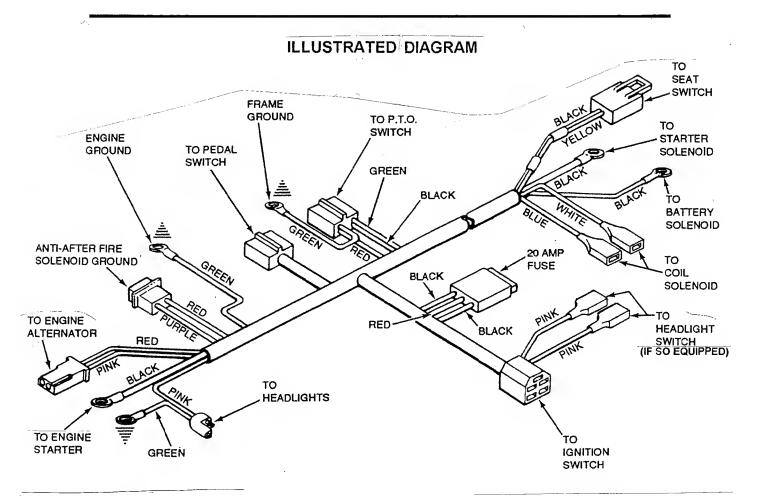

#### **ELECTRICAL - Brigg's & Stratton Engines**

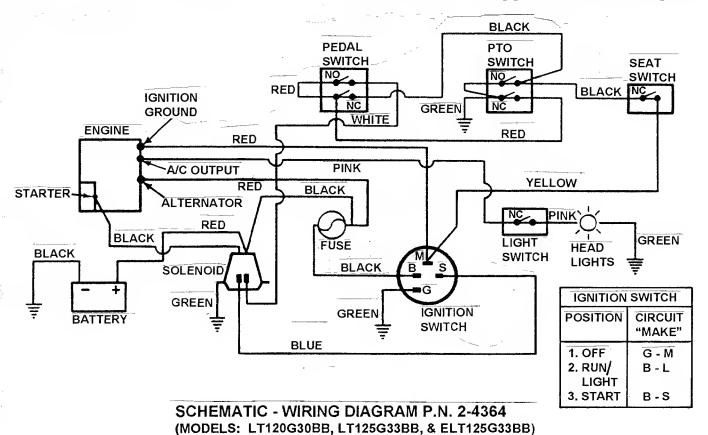

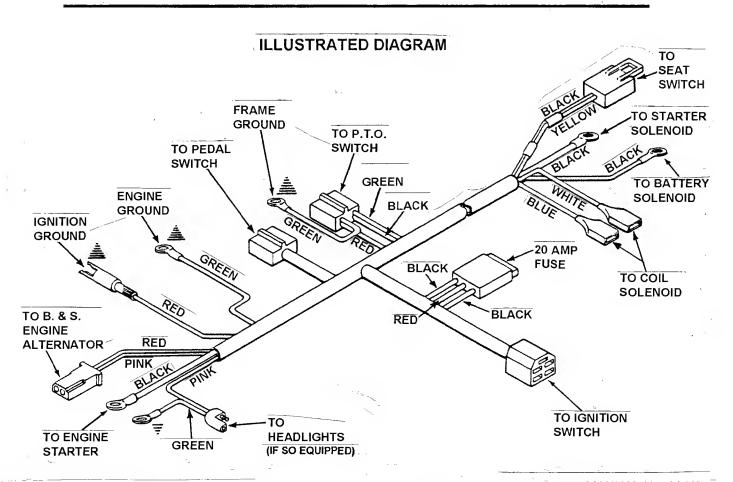

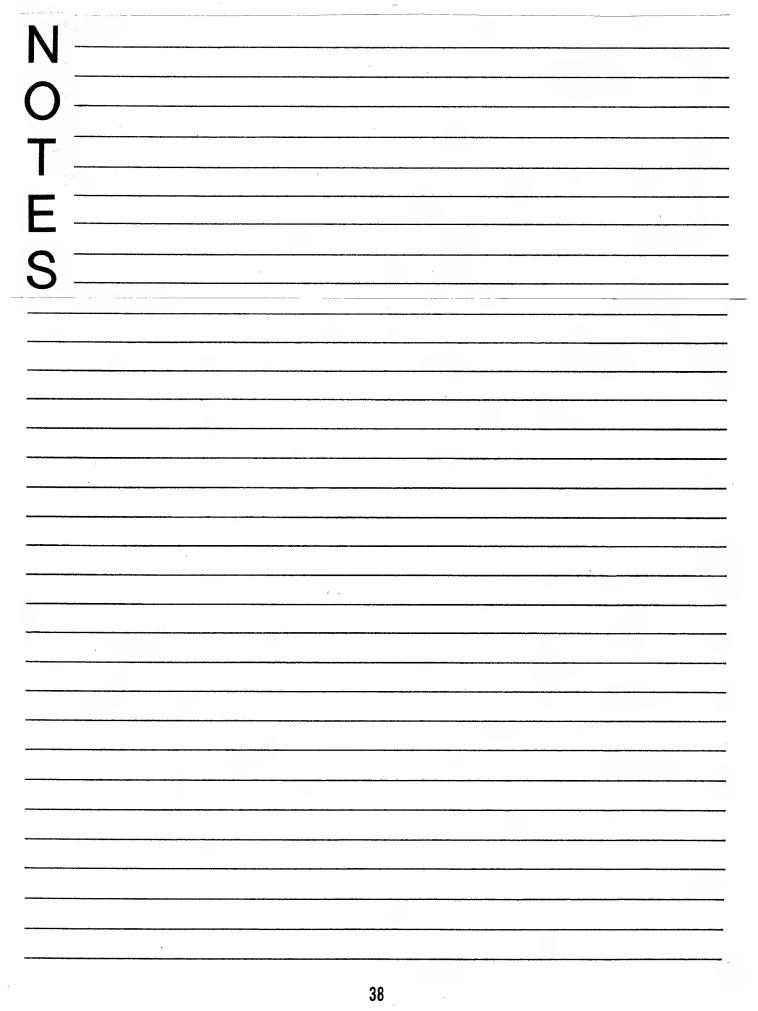

	N
	C
	S
·	
· · · · · · · · · · · · · · · · · · ·	

#### **Parts Manual for**

## SNAPPER

GEAR & HYDRO DRIVE MODELS:
LT120G30BB, LT125G33BB, ELT125G33BB
LT140H33BBV, ELT140H33BBV
LT140H38BBV
LT150H38BBV
LT155H42BBV
SERIES "B"
LAWN
TRACTORS

SNAPPER®McDonough, GA., 30253 U.S.A.